 
 


Ref No	Part No	Description
01	5DM-11101-00-00	Cylinder Head Assy
02	5DM-11133-10-00	• . Guide, Intake Valve
03	93440-07149-00	• . Circlip
04	91808-16023-00	• . Pin, Dowel
05	90105-06026-00	• . Bolt, Flange
06	90340-12112-00	• . Plug, Straight Screw
07	90116-06475-00	• . Bolt, Stud
08	90338-08174-00	• . Plug
09	90201-090P4-00	Washer, Plate
10	90179-09612-00	Nut
11	94701-00329-00	Plug, Spark (u24esr-n)
11	94701-00330-00	Plug, Spark (ngk-r Cr8e)
12	5DM-11181-00-00	Gasket, Cylinder Head 1
13	4YR-11191-00-00	Cover, Cylinder Head 1
14	4YR-11193-00-00	Gasket, Head Cover 1
15	90109-066F0-00	Bolt
16	4KM-1111G-00-00	Rubber, Mount 1
17	4YR-1111M-00-00	Cover 1
18	91314-05014-00	Bolt

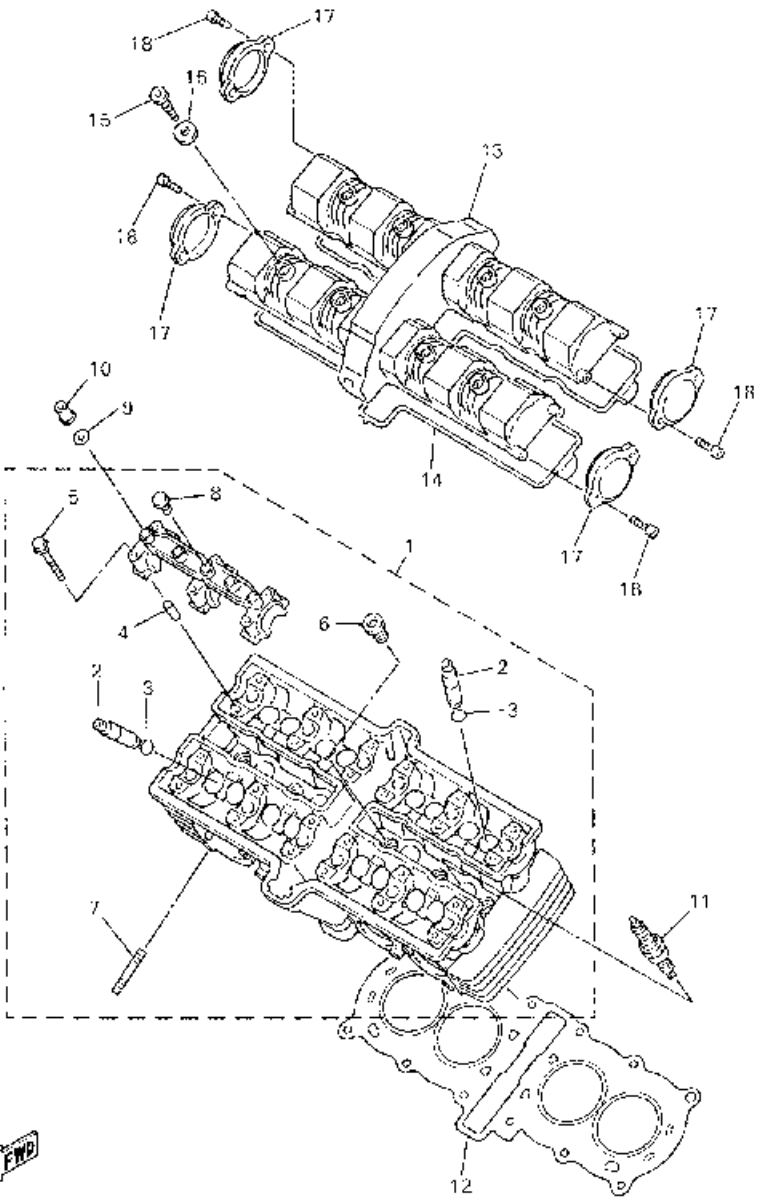


5DM351-0010


Ref No	Part No	Description
01	5DM-11311-00-00	Cylinder 1
02	93612-16254-00	Pin, Dowel
03	5DM-11351-00-00	Gasket, Cylinder

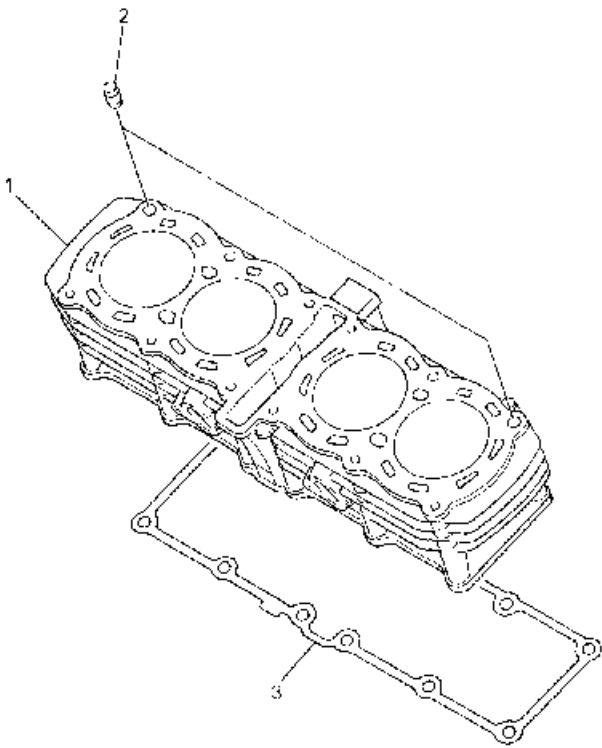

5DM351-8020

Ref No	Part No	Description
01	5DM-11411-01-00	Crankshaft
02	93101-29165-00	Oil Seal
02	93101-29166-00	Oil Seal
03	1WG-11416-00-00	Plane Bearing, Crankshaft 1
03	1WG-11416-10-00	Plane Bearing, Crankshaft 1
03	1WG-11416-20-00	Plane Bearing, Crankshaft 1
03	1WG-11416-30-00	Plane Bearing, Crankshaft 1
03	1WG-11416-40-00	Plane Bearing, Crankshaft 1
03	1WG-11416-50-00	Plane Bearing, Crankshaft 1
04	5DM-11631-00-00	Piston (std)
05	4JH-11603-00-00	Piston Ring Set (std)
06	4JH-11633-00-00	Pin, Piston
07	90468-12069-00	Clip
08	5DM-11650-00-00	Connecting Rod Assy
09	4JH-11654-00-00	• . Bolt, Connecting Rod
10	90179-07652-00	• . Nut
11	1WG-11656-00-00	Plane Bearing, Connecting Rod
11	1WG-11656-10-00	Plane Bearing, Connecting Rod
11	1WG-11656-20-00	Plane Bearing, Connecting Rod
11	1WG-11656-30-00	Plane Bearing, Connecting Rod

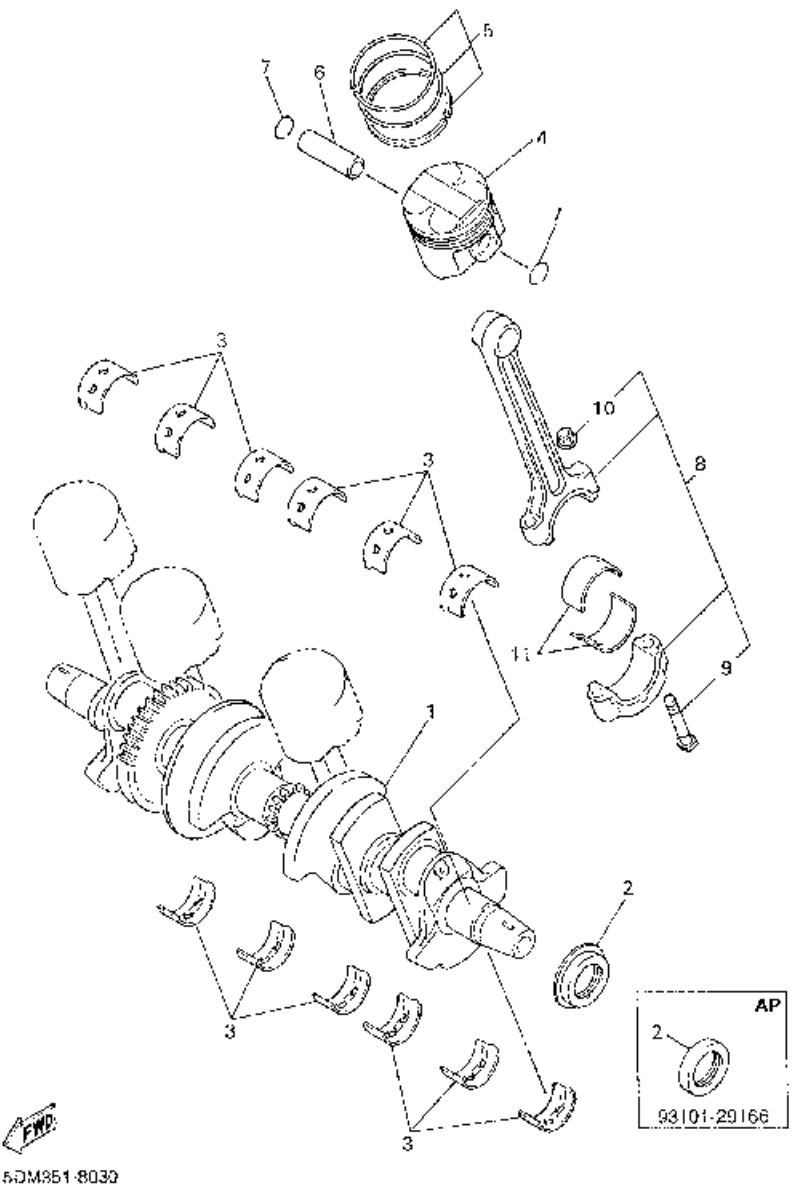 


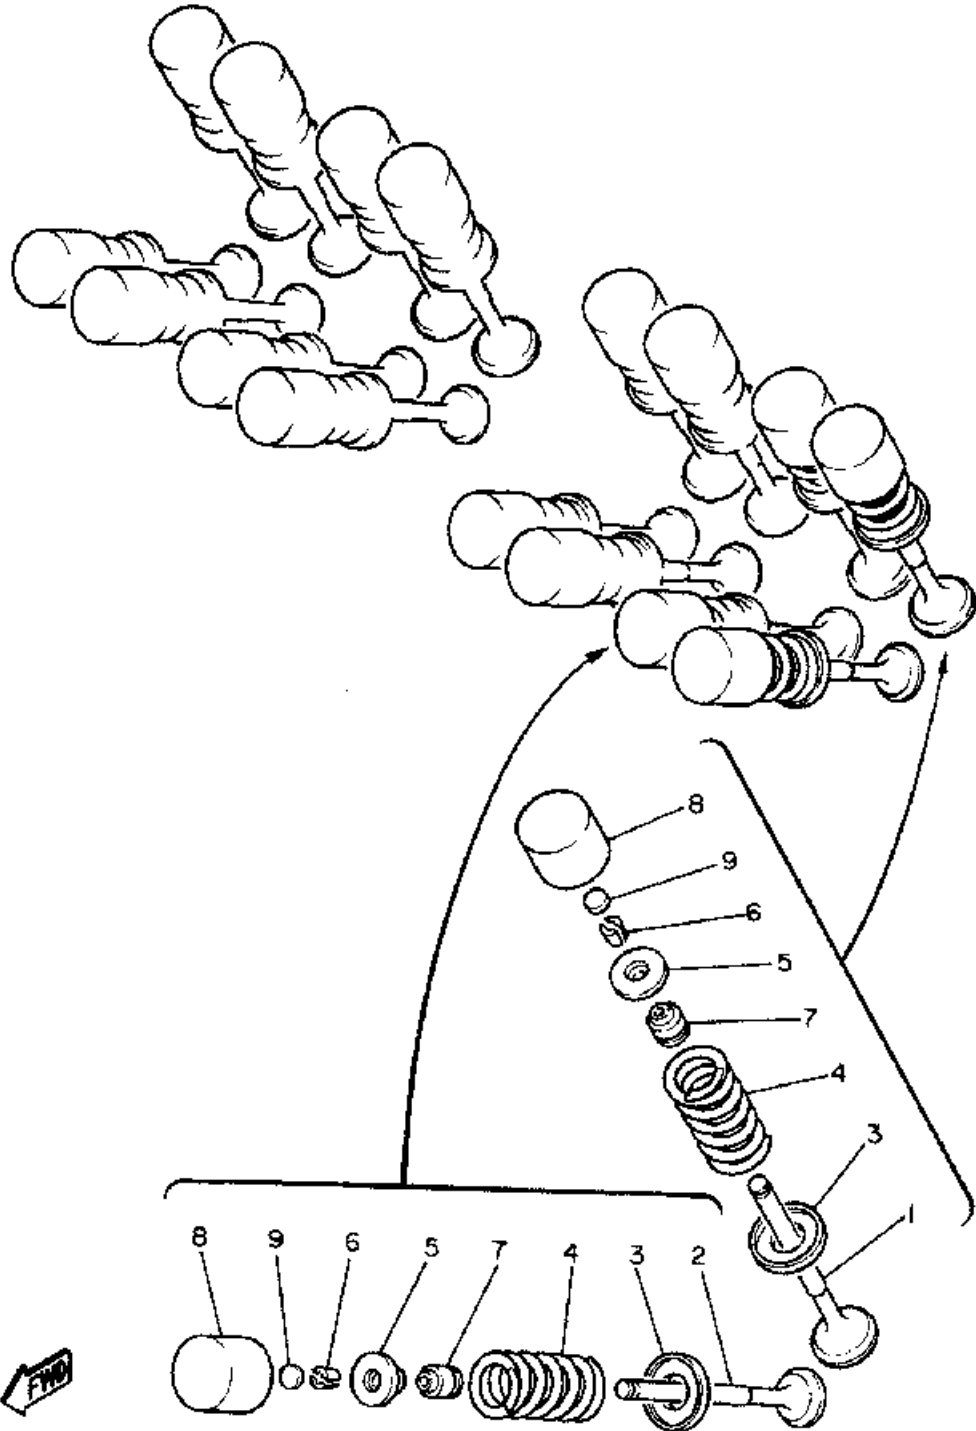 


Ref No	Part No	Description
01	5DM-12111-00-00	Valve, Intake
02	5DM-12121-00-00	Valve, Exhaust
03	1WG-12116-00-00	Seat, Valve Spring
04	4TV-12113-00-00	Spring, Valve Inner
05	3TJ-12117-00-00	Retainer, Valve Spring
06	1HX-12118-00-00	Cotter, Valve
07	4TV-12119-00-00	Seal, Valve Stem
08	3FV-12153-10-00	Lifter, Valve
08	3FV-12153-09-00	Lifter, Valve (o/s)
09	1HX-12168-00-00	Pad, Adjusting 2 (1.20)
09	1HX-12168-20-00	Pad, Adjusting 2 (1.25)
09	1HX-12168-40-00	Pad, Adjusting 2 (1.30)
09	1HX-12168-60-00	Pad, Adjusting 2 (1.35)
09	1HX-12168-80-00	Pad, Adjusting 2 (1.40)
09	1HX-12168-A0-00	Pad, Adjusting 2 (1.45)
09	1HX-12168-F0-00	Pad, Adjusting 2 (1.50)
09	1HX-12168-H1-00	Pad, Adjusting 2 (1.55)
09	1HX-12168-K1-00	Pad, Adjusting 2 (1.60)
09	1HX-12168-M1-00	Pad, Adjusting 2 (1.65)
09	1HX-12168-R1-00	Pad, Adjusting 2 (1.70)
09	1HX-12168-U1-00	Pad, Adjusting 2 (1.75)
09	1HX-12168-W1-00	Pad, Adjusting 2 (1.80)
09	1HX-12168-Y1-00	Pad, Adjusting 2 (1.85)
09	1HX-12169-11-00	Pad, Adjusting 2 (1.90)
09	1HX-12169-31-00	Pad, Adjusting 2 (1.95)
09	1HX-12169-50-00	Pad, Adjusting 2 (2.00)
09	1HX-12169-70-00	Pad, Adjusting 2 (2.05)
09	1HX-12169-90-00	Pad, Adjusting 2 (2.10)
09	1HX-12169-E0-00	Pad, Adjusting 2 (2.15)
09	1HX-12169-G0-00	Pad, Adjusting 2 (2.20)
09	1HX-12169-J0-00	Pad, Adjusting 2 (2.25)
09	1HX-12169-L0-00	Pad, Adjusting 2 (2.30)
09	1HX-12169-N0-00	Pad, Adjusting 2 (2.35)
09	1HX-12169-T0-00	Pad, Adjusting 2 (2.40)




1WG010-6040

Ref No	Part No	Description
01	5DM-12171-00-00	Camshaft 1
02	5DM-12181-00-00	Camshaft 2
03	4YR-12176-00-00	Sprocket, Cam Chain
04	90105-07342-00	Bolt, Flange
05	94591-47130-00	Chain
06	4YR-12241-00-00	Guide, Stopper 2
07	5DM-12210-00-00	Tensioner Assy, Cam Chain
08	4HM-12213-00-00	Gasket, Tensioner Case
09	91317-06025-00	Bolt
10	4YR-12251-00-00	Damper, Chain 1
11	4YR-12252-00-00	Damper, Chain 2
12	90109-065A8-00	Bolt

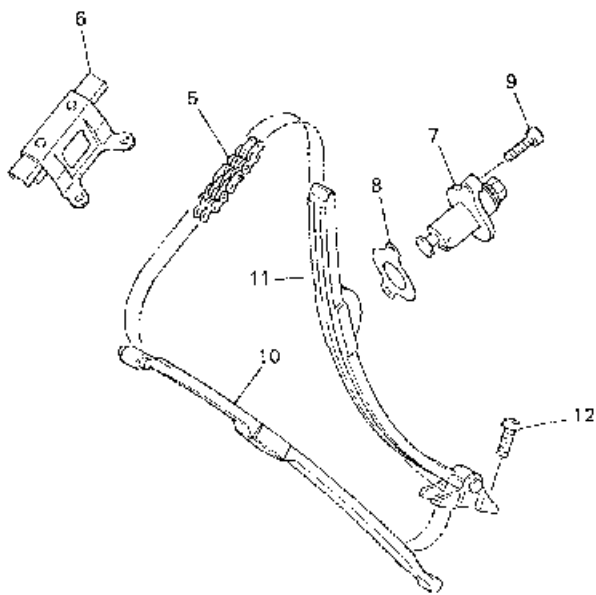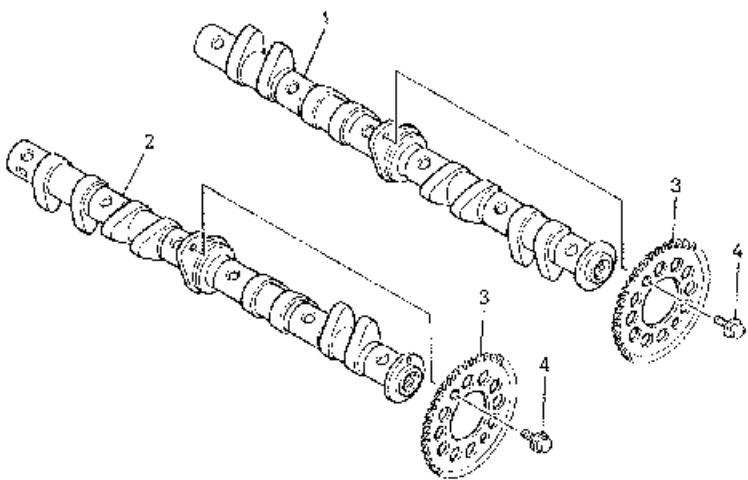  


5DM351-8050

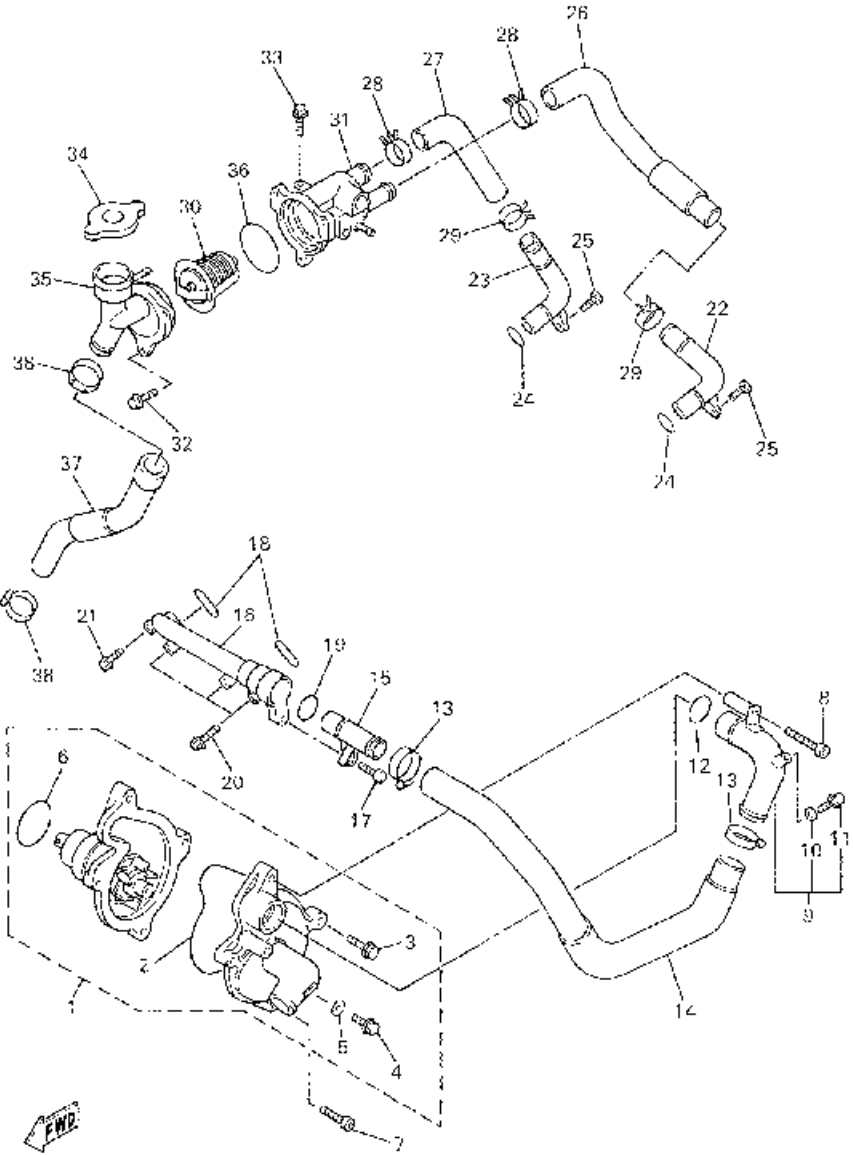 

5DM351-0060


Ref No	Part No	Description
01	5RT-Y1242-00-00	Water Pump Assy
02	1WG-12439-00-00	. O-ring
03	90105-066A5-00	. Bolt, Flange
04	95024-06012-00	. Bolt, Flange
05	90430-06014-00	. Gasket
06	93210-33133-00	. O-ring
07	91314-06035-00	Bolt
08	91314-06065-00	Bolt
09	5DM-12481-00-00	Pipe 1
10	90430-06014-00	. Gasket
11	90153-06029-00	. Screw, Hexagon
12	93210-21190-00	O-ring
13	90450-32015-00	Hose Clamp Assy
14	4YR-12576-00-00	Hose 1
15	5DM-12482-00-00	Pipe 2
16	4YR-12446-00-00	Joint
17	91314-06012-00	Bolt
18	93210-17746-00	O-ring
19	93210-21190-00	O-ring
20	95027-06040-00	Bolt, Flange
21	95027-06025-00	Bolt, Flange
22	4YR-12483-00-00	Pipe 3
23	4YR-12484-00-00	Pipe 4
24	93210-15414-00	O-ring
25	91317-06010-00	Bolt
26	4YR-12577-00-00	Hose 2
27	4YR-12578-00-00	Hose 3
28	90467-23190-00	Clip
29	90467-22100-00	Clip
30	1AE-12410-00-00	Thermostat Assy
31	4YR-12417-00-00	Housing, Thermostat
32	95027-06020-00	Bolt, Flange
33	95027-06030-00	Bolt, Flange
34	22W-12462-00-00	Cap, Radiator
35	1AE-12591-01-00	Supt, Filler Neck
36	93210-49046-00	O-ring
37	4YR-12579-00-00	Hose 4
38	90450-38040-00	Hose Clamp Assy

Ref No	Part No	Description
01	5RT-12461-00-00	Radiator Assy
02	5DM-12405-01-00	Blower Assy
03	90179-06403-00	Nut
04	5DM-12588-00-00	Hose 5
05	5DM-1240J-00-00	Radiator Cover Assy1
06	92014-06010-00	Bolt, Button Head
07	90467-26189-00	Clip
08	90450-32015-00	Hose Clamp Assy
09	5DM-12485-01-00	Pipe 5
10	95817-06012-00	Bolt, Flange
11	4YR-12589-00-00	Hose 6
12	90480-15363-00	Grommet
13	90387-07391-00	Collar
14	95807-06025-00	Bolt, Flange
15	90201-06071-00	Washer, Plate
16	90480-10542-00	Grommet
17	4YR-12498-00-00	Protector
18	90467-08092-00	Clip
19	5DM-1243A-00-00	Hose 1
20	90467-06194-00	Clip
21	5DM-1243E-00-00	Hose 2
22	90450-22017-00	Hose Clamp Assy
23	90467-15168-00	Clip
24	5DM-12589-00-00	Hose 6
25	5DM-12551-00-00	Hose 7
26	5DM-12476-01-00	Pipe 6
27	95817-06012-00	Bolt, Flange
28	5DM-12552-00-00	Hose 8
29	1UA-82591-00-00	Band
30	5RT-12467-00-00	Cover, Radiator
31	1UF-12435-00-00	Gasket
32	90183-05024-00	Nut, Spring
33	98507-05010-00	Screw, Pan Head
34	92907-05600-00	Washer, Plate
35	5LV-12465-00-00	Damper, Radiator

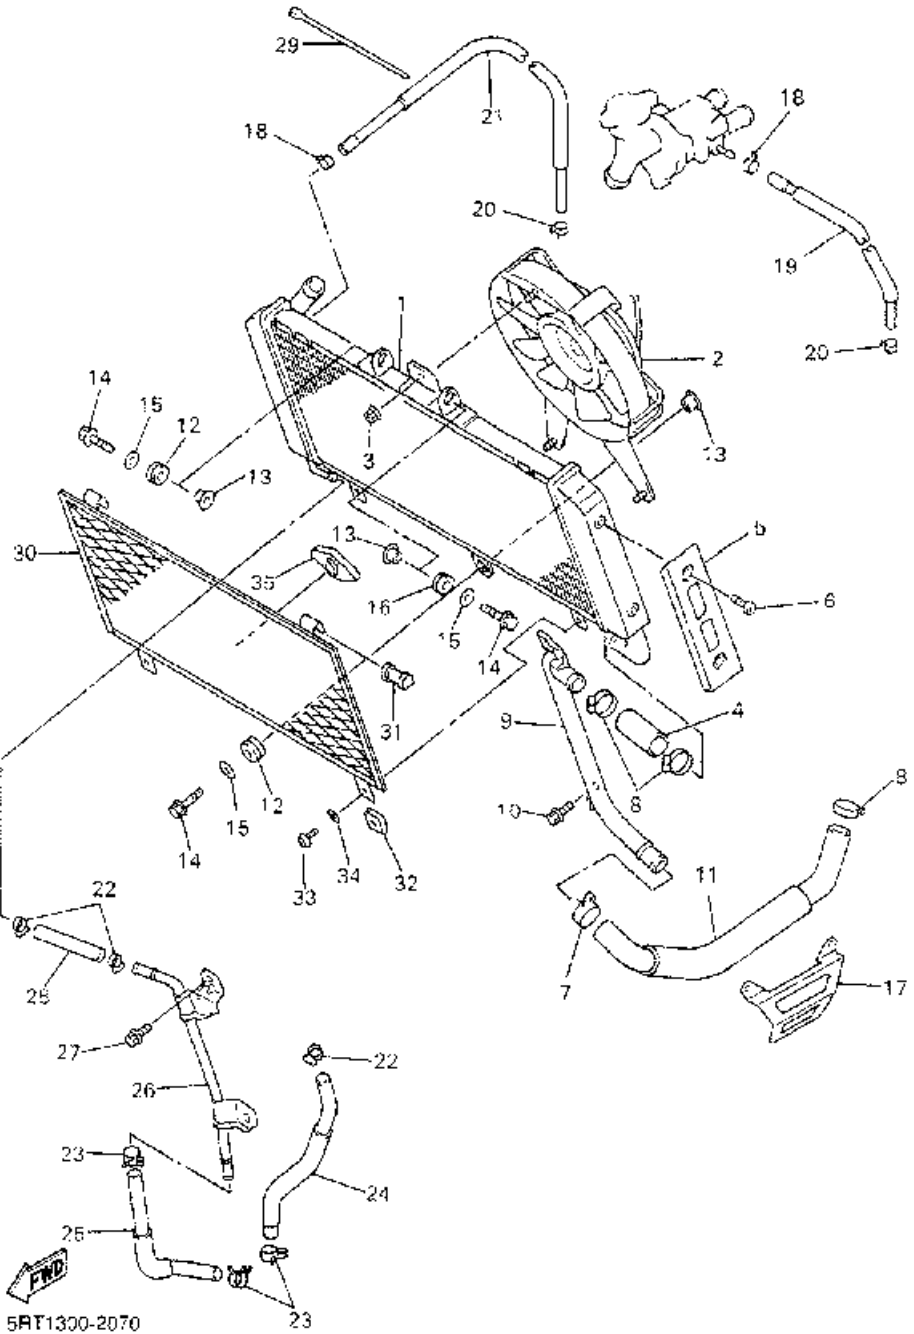 

OIL PUMP


Ref No	Part No	Description
01	4JH-13330-00-00	Pump Shaft Assy
02	1WG-13316-00-00	Cover, Pump
03	90201-113K2-00	Washer, Plate
04	93603-17070-00	Pin, Dowel
05	1WG-13310-00-00	Rotor Assy 1
06	93603-09106-00	Pin, Dowel
07	1WG-13336-00-00	Housing, Rotor
08	98507-06020-00	Screw, Pan Head
09	99530-08012-00	Pin, Dowel
10	1WG-13329-00-00	Gasket, Pump Cover
11	90110-06130-00	Bolt, Hexagon Socket Head
12	3TJ-13412-00-00	Housing, Strainer
13	4H7-13411-02-00	Strainer, Oil
14	90110-06225-00	Bolt, Hexagon Socket Head

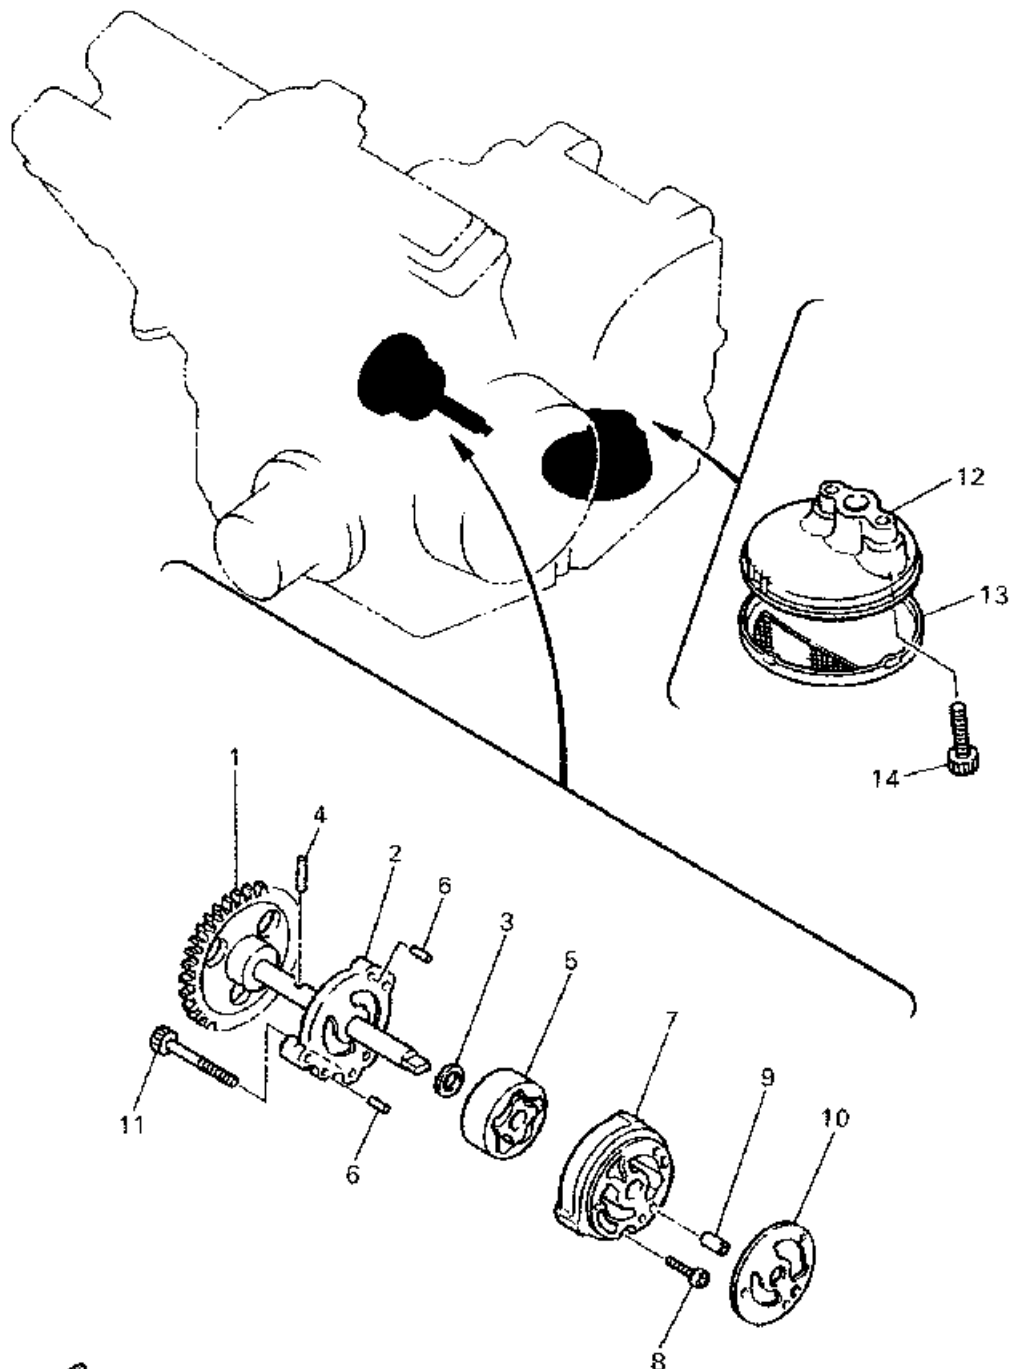 

4JH351-4080

OIL COOLER


Ref No	Part No	Description
01	5DM-13470-00-00	Oil Cooler Assy
02	4JH-13473-00-00	• . O-ring
03	90401-20170-00	Bolt, Union
04	5DM-13440-00-00	Element Assy, Oil Cleaner
05	4G0-13490-01-00	Relief Valve Assy
06	93210-10096-00	O-ring
07	4YR-13417-00-00	Cover, Strainer
08	4TV-13414-00-00	Gasket, Strainer Cover
09	91317-06025-00	Bolt
10	99530-08016-00	Pin, Dowel
11	90340-14132-00	Plug, Straight Screw
12	214-11198-01-00	Gasket
13	90465-10306-00	Clamp
14	5RT-13161-00-00	Pipe, Delivery 1
15	91317-06010-00	Bolt
16	90401-10106-00	Bolt, Union
17	90430-10188-00	Gasket

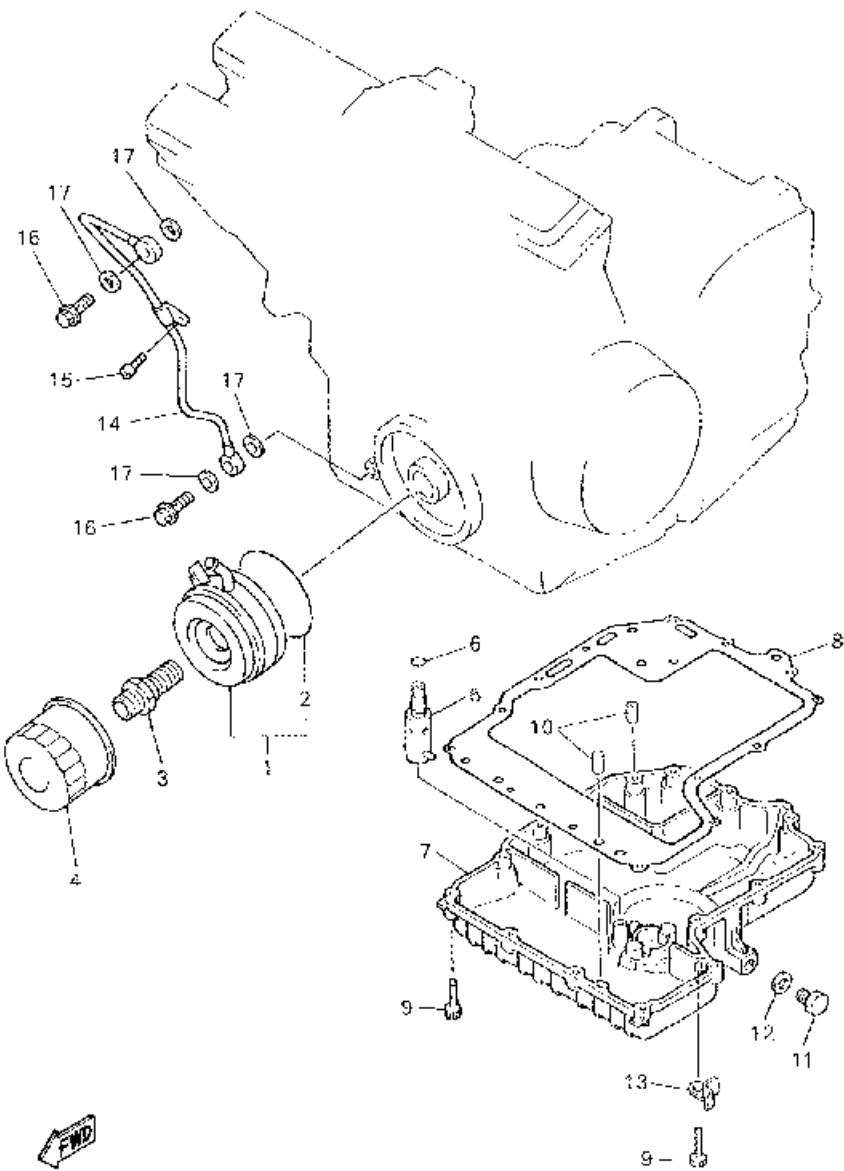 


5DM351-8090

INTAKE

Ref No	Part No	Description
01	5DM-13586-01-00	Joint, Carburetor 1
02	5DM-13596-01-00	Joint, Carburetor 2
03	16G-13569-00-00	Plug, Blind
04	90467-10039-00	Clip
05	91317-06020-00	Bolt
06	90450-47001-00	Hose Clamp Assy
07	4YR-14411-00-00	Case, Air Cleaner 1
08	4YR-14421-01-00	Case, Air Cleaner 2
09	4BR-14452-00-00	Seal
10	97707-50125-00	Screw, Tapping
11	5DM-14477-00-00	Plate
12	97707-50120-00	Screw, Tapping
13	4HM-21647-00-00	Band
14	90267-40054-00	Rivet, Blind
15	5DM-14476-00-00	Seal
16	4YR-14451-01-00	Element, Air Cleaner
17	5DM-14412-00-00	Cap, Cleaner Case 1
18	3GM-14452-00-00	Seal
19	97707-50130-00	Screw, Tapping
20	5DM-14453-00-00	Joint, Air Cleaner 1
21	90450-58090-00	Hose Clamp Assy
22	4YR-1443E-00-00	Pipe, Drain
23	90467-10041-00	Clip
24	4X7-2149Y-00-00	Filter Assy
25	90445-11147-00	Hose (I50)
26	31A-14435-00-00	Grommet
27	31A-14419-00-00	Pipe
28	90413-07007-00	Way 3
29	90445-11637-00	Hose (I340)
30	95807-06010-00	Bolt, Flange
31	95807-06016-00	Bolt, Flange
32	4YR-14417-00-00	Cover 1
33	4YR-14418-00-00	Cover 2
34	90154-06075-00	Screw, Binding

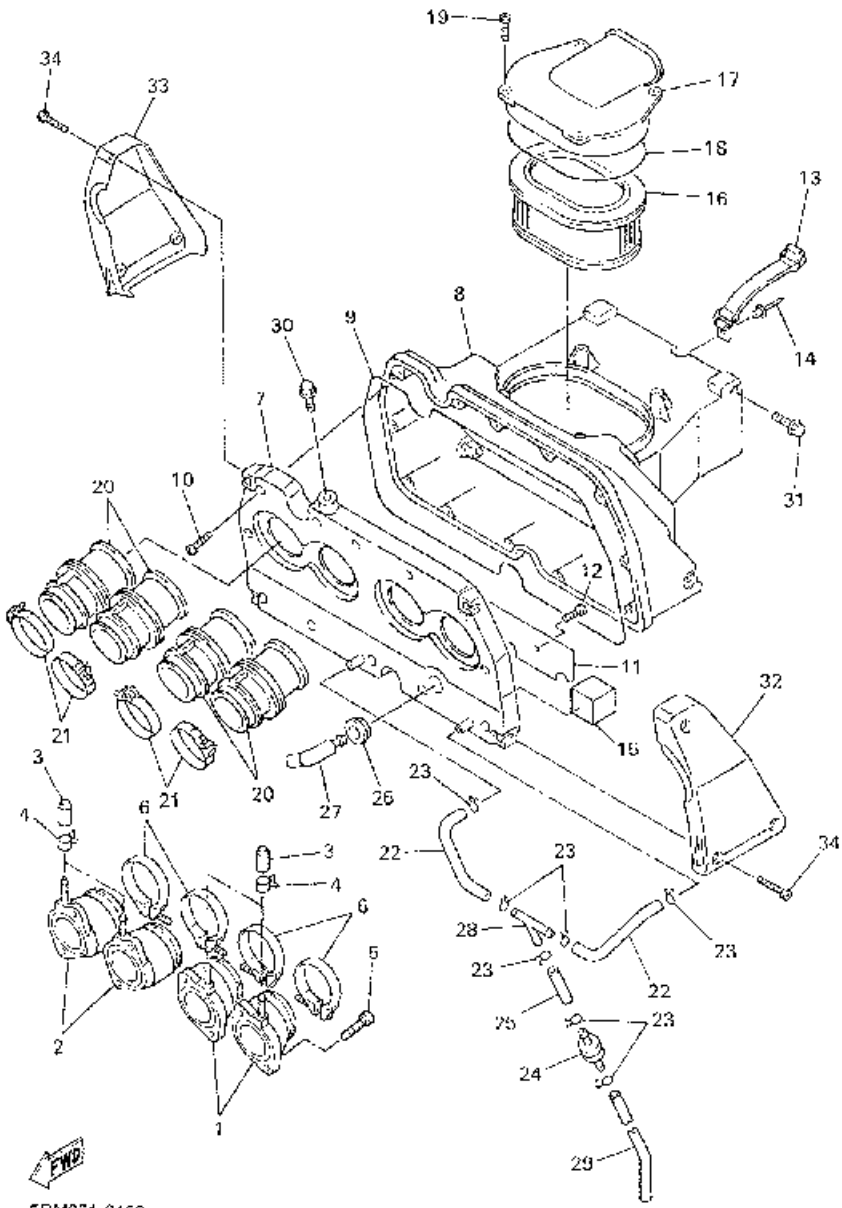 


5DM351-8100

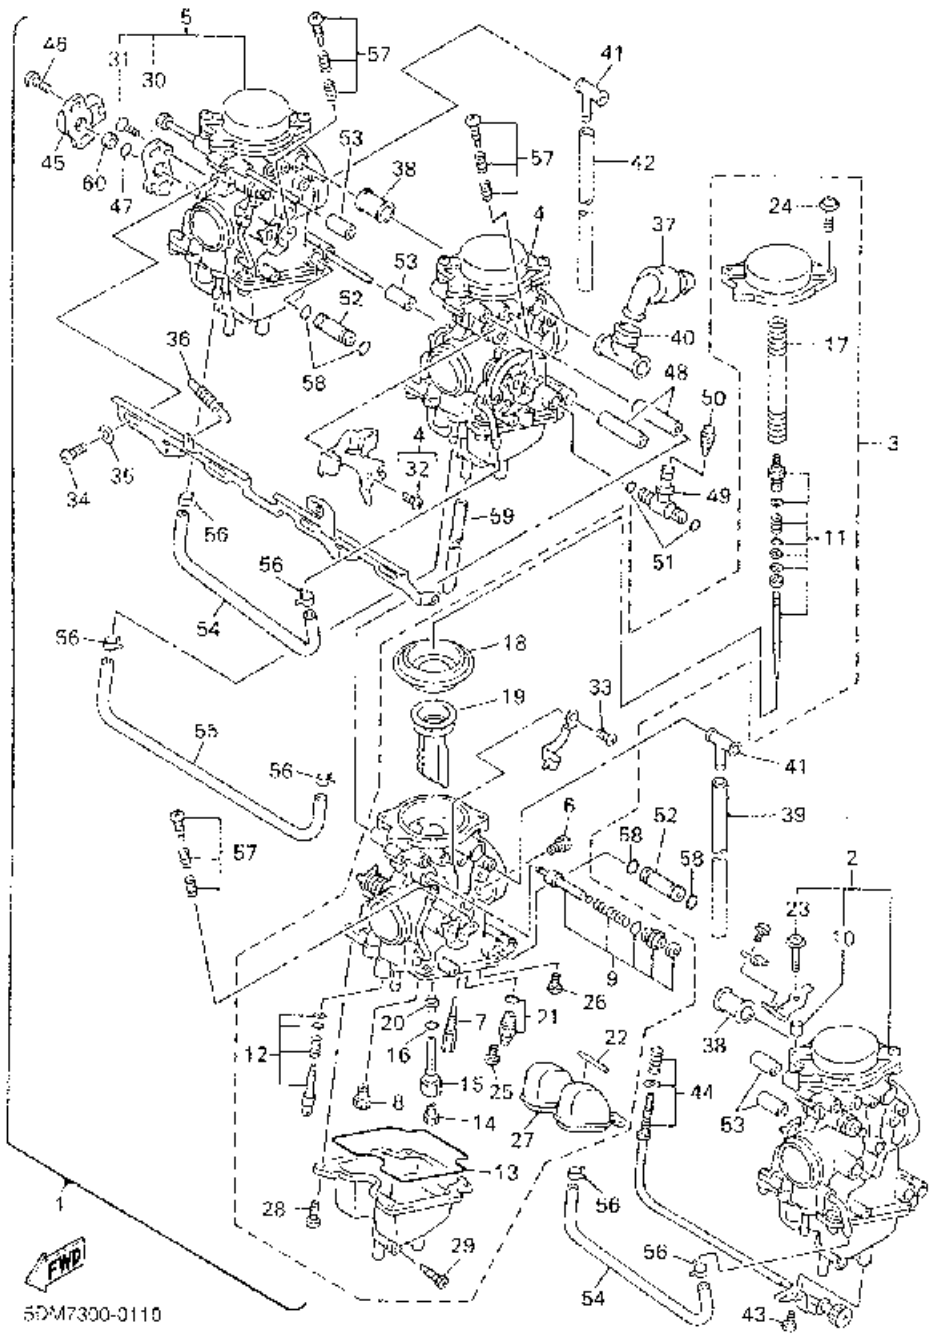 


Ref No	Part No	Description
01	5RT-14900-00-00	Carburetor Assy
02	5RT-14901-00-00	• . Carburetor Assy 1
03	5RT-14902-00-00	• . Carburetor Assy 2
04	5RT-14903-00-00	• . Carburetor Assy 3
05	5RT-14904-00-00	• . Carburetor Assy 4
06	1HX-14231-26-00	• • . Jet, Main (#130)
07	4KM-14142-12-00	• • . Jet, Pilot (# 12.5)
08	3G2-14231-00-00	• • . Jet,main (0.6)
09	5DM-1410A-00-00	• • . Starter Set
10	4KM-14194-00-00	• • . Ring
11	5DM-1490J-00-00	• • . Needle Set
12	5MP-14105-00-00	• • . Pilot Screw Set
13	5DM-14561-00-00	• • . O-ring
14	3G2-14231-23-00	• • . Jet, Main (#115)
15	5DM-14261-00-00	• • . Holder
16	583-14561-00-00	• • . O-ring
17	5DM-14933-00-00	• • . Spring, Diaphragm
18	5DM-14940-00-00	• • . Diaphragm Assy
19	5DM-14113-00-00	• • . Valve, Throttle 2
20	5DM-14141-40-00	• • . Nozzle, Main
21	4SV-14107-10-00	• • . Needle Valve Set
22	127-14186-00-00	• • . Pin, Float
23	97890-05016-00	• • . Screw, Pan Head
24	4KM-14216-00-00	• • . Screw
25	98507-04008-00	• • . Screw, Pan Head
26	1FN-14565-00-00	• • . Screw
27	5DM-14985-00-00	• • . Float
28	98580-04010-00	• • . Screw, Pan Head
29	12R-14191-00-00	• • . Plug, Drain
30	5DM-14291-10-00	• • . Bracket 1
31	98707-04008-00	• • . Screw, Flat Head
32	98507-05010-00	• • . Screw, Pan Head
33	98507-05008-00	• • . Screw, Pan Head
34	5DM-14565-00-00	• . Screw
35	4NK-14327-00-00	• . Packing
36	5DM-14935-00-00	• . Spring
37	5DM-24515-00-00	• . Net, Filter 2
38	5DM-14348-00-00	• . Pipe 1
39	5DM-14349-00-00	• . Pipe
40	5DM-14396-00-00	• . Pipe
41	5DM-14396-10-00	• . Pipe
42	4XV-90445-10-00	• . Hose
43	97890-05008-00	• . Screw, Pan Head
44	5DM-14103-00-00	• . Throttle Screw Set
45	4SV-85885-00-00	• . Throttle Position Sensor Assy
46	4HM-14216-00-00	• . Screw
47	4KG-14285-00-00	• . Washer
48	4XV-14149-50-00	• . Pipe
49	5DM-14251-00-00	• . Nipple
50	1KT-14994-00-00	• . Net, Filter
51	3EN-14997-00-00	• . Seal
52	5DM-14148-00-00	• . Pipe
53	5DM-14149-00-00	• . Pipe
54	5DM-14987-00-00	• . Hose

Ref No	Part No	Description
55	5DM-14987-10-00	. Hose
56	5DM-14919-00-00	. Clip
57	3EN-1490K-00-00	. Stop Screw Set
58	36Y-14147-00-00	. O-ring
59	5DM-14348-10-00	. Pipe 1
60	4HM-14239-00-00	. Seal

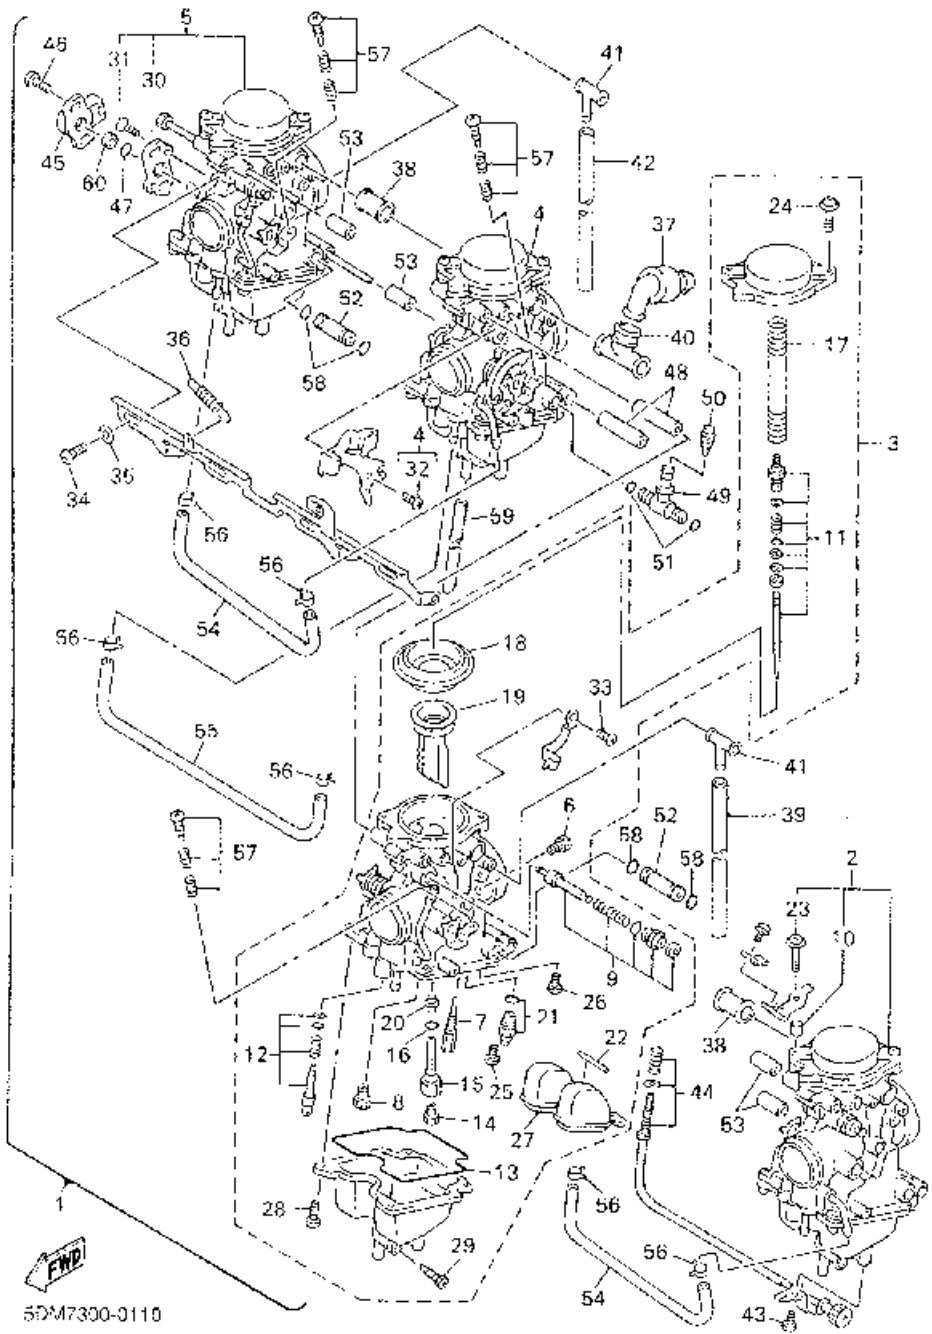 


5DM7300-0110

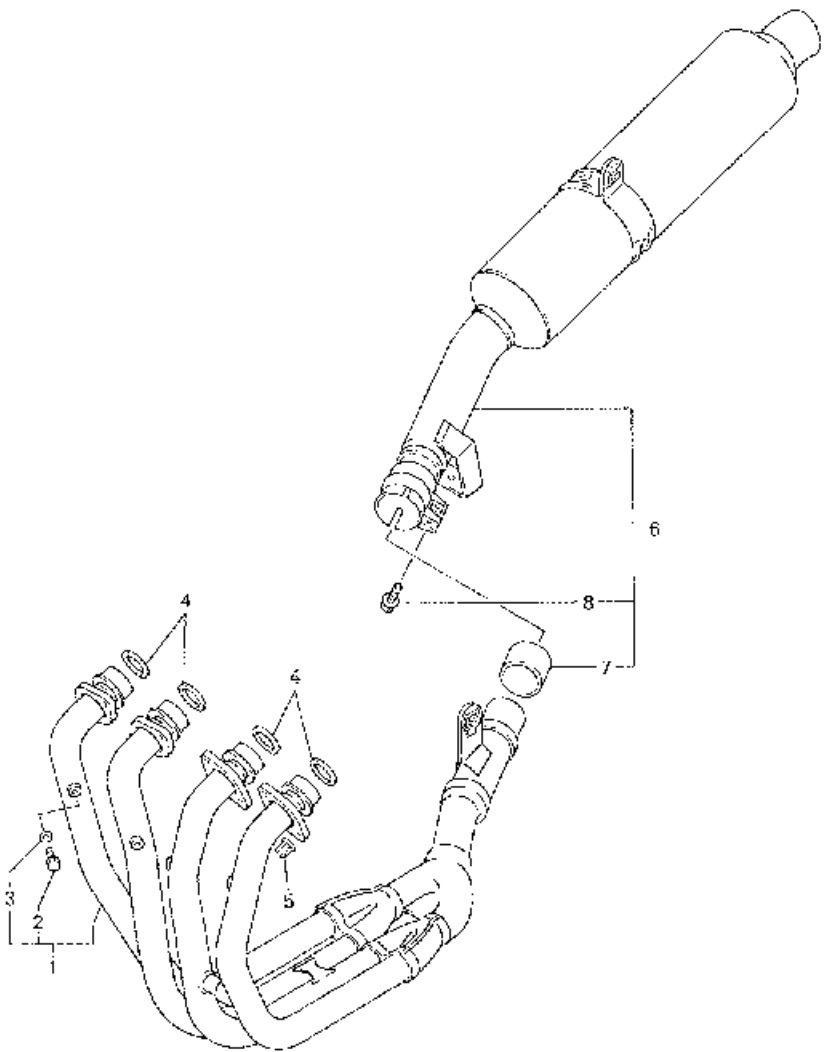 

01	5RT-14602-00-00	Exhaust Pipe Comp.
02	97080-06008-00	• . Bolt
03	92990-06600-00	• . Washer, Plate
04	3YF-14613-01-00	Gasket, Exhaust Pipe
05	90179-06668-00	Nut
06	5RT-14710-00-00	Muffler Assy 1
07	3XW-14714-00-00	• . Gasket, Muffler
08	95814-08025-00	• . Bolt, Flange




 5DM351-8120

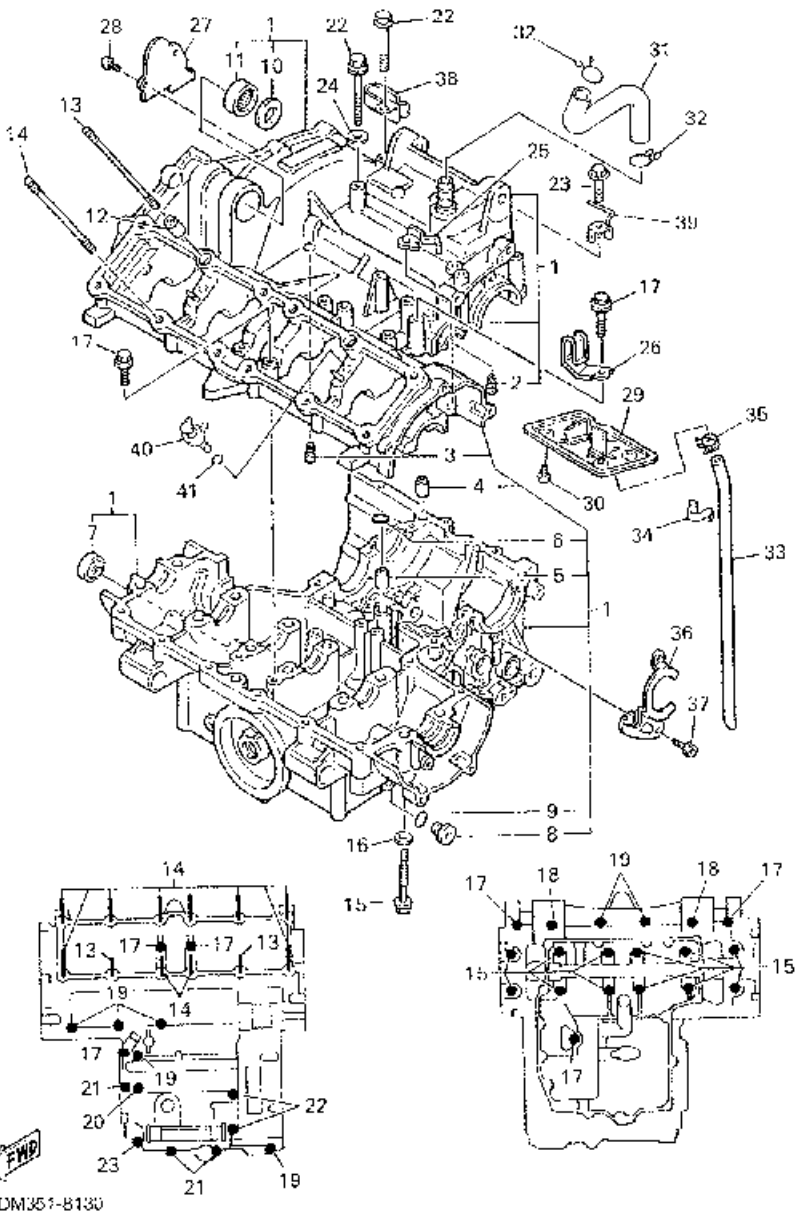


Ref No	Part No	Description
01	5DM-15100-02-00	Crankcase Assy
02	11H-15138-00-00	. Nozzle 1
03	26H-15138-00-00	. Nozzle 1
04	99530-12016-00	. Pin, Dowel
05	4JH-15138-00-00	. Nozzle 1
06	93210-12152-00	. O-ring
07	4H7-15361-00-00	. Gauge, Level
08	36Y-15189-00-00	. Plug
09	93210-16325-00	. O-ring
10	90201-237K5-00	. Washer, Plate
11	93315-32516-00	. Bearing
12	93612-16254-00	Pin, Dowel
13	90116-09615-00	Bolt, Stud
14	90116-09616-00	Bolt, Stud
15	90105-08630-00	Bolt, Flange
16	90201-087K3-00	Washer, Plate
17	90105-063A6-00	Bolt, Flange
18	90105-06024-00	Bolt, Flange
19	90105-060A2-00	Bolt, Flange
20	90105-063A7-00	Bolt, Flange
21	90105-063A8-00	Bolt, Flange
22	95817-06090-00	Bolt, Flange
23	95817-08070-00	Bolt, Flange
24	90430-06166-00	Gasket
25	90465-10307-00	Clamp
26	90465-10308-00	Clamp
27	4JH-11165-00-00	Plate, Breather
28	98507-06012-00	Screw
29	5RT-11145-00-00	Plate, Breather 2
30	98507-06012-00	Screw
31	4YR-11166-00-00	Pipe, Breather 1
32	90467-14015-00	Clip
33	90445-116E9-00	Hose (I249)
34	90465-06289-00	Clamp
35	90467-10038-00	Clip
36	4JH-15381-00-00	Plate, Bearing Cover
37	91317-06012-00	Bolt
38	90465-10393-00	Clamp
39	90462-16238-00	Clamp
40	5RT-15105-00-00	Nozzle Assy
41	93210-06422-00	O-ring

Ref No	Part No	Description
01	5DM-15411-00-00	Cover, Crankcase 1
02	1L9-15417-00-00	Cover, Cap
03	3HE-15451-10-00	Gasket, Crankcase Cover 1
04	3HE-15467-10-00	Gasket
05	99530-08016-00	Pin, Dowel
06	91314-06040-00	Bolt
07	91314-06050-00	Bolt
08	4YR-15421-00-00	Cover, Crankcase 2
09	4TV-15461-00-00	Gasket, Crankcase Cover 2
10	99530-08016-00	Pin, Dowel
11	91314-06025-00	Bolt
12	91314-06035-00	Bolt
13	91314-06045-00	Bolt
14	4YR-15431-00-00	Cover, Crankcase 3
15	4TV-15462-00-00	Gasket, Crankcase Cover 3
16	99530-08016-00	Pin, Dowel
17	91314-06025-00	Bolt
18	91314-06035-00	Bolt
19	3F9-15362-00-00	Plug, Oil Level
20	93210-27194-00	O-ring
21	4YR-15415-00-00	Cover, Generator
22	90340-08014-00	Plug, Straight Screw
23	99530-08016-00	Pin, Dowel
24	91314-06025-00	Bolt
25	91314-06035-00	Bolt
26	91314-06035-00	Bolt
27	90462-10182-00	Clamp
28	98507-06010-00	Screw

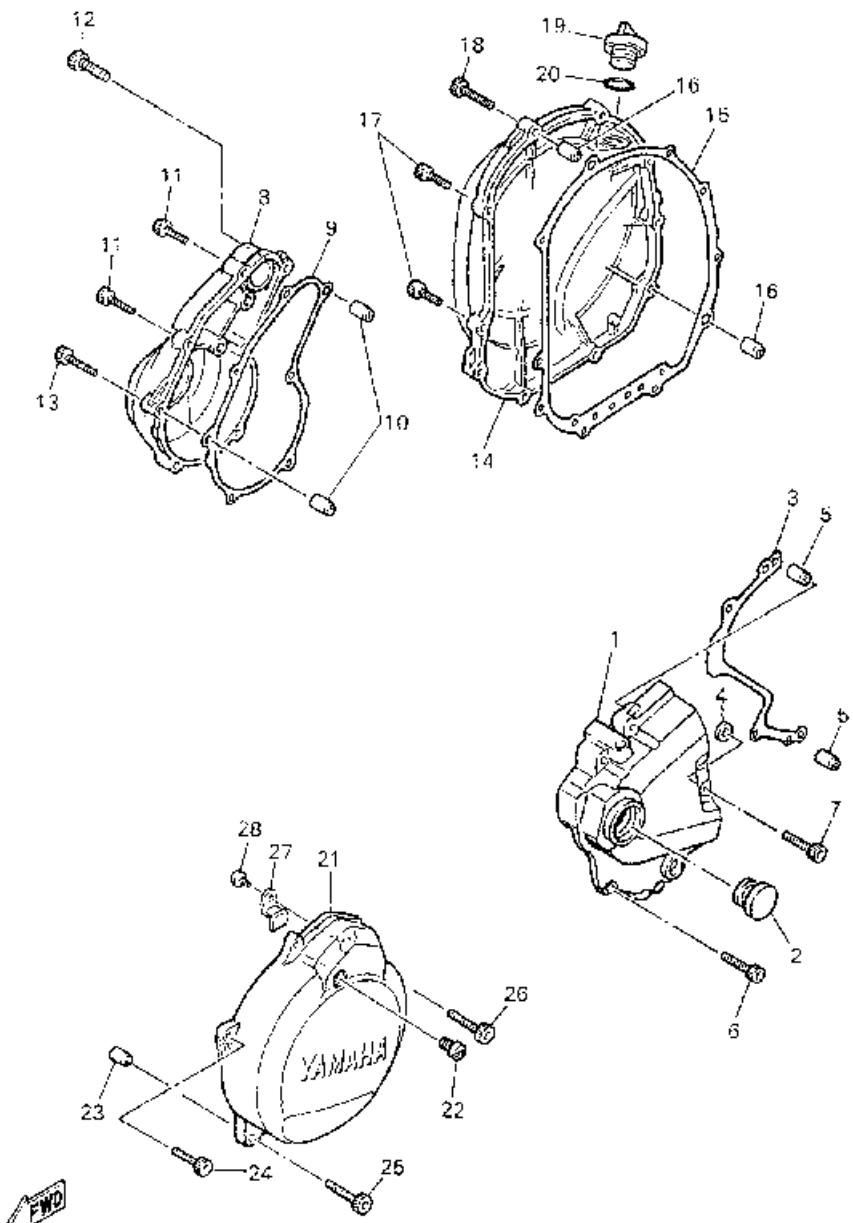 


5DM/C351-1140

Ref No	Part No	Description
01	5RT-15521-00-00	Shaft 1
02	3HE-15512-00-00	Gear, Idler 1
03	3HE-15517-00-00	Gear, Idler 2
04	3TJ-15521-00-00	Shaft 1
05	3HE-15590-02-00	Starter One-way Assy
06	3HE-15524-00-00	Wheel, Starter
07	91317-08020-00	Bolt
08	4JH-15515-00-00	Gear 3
09	90280-05048-00	Key, Woodruff
10	90201-107K6-00	Washer, Plate
11	90105-10445-00	Bolt, Flange
12	93306-20006-00	Bearing (b6200)

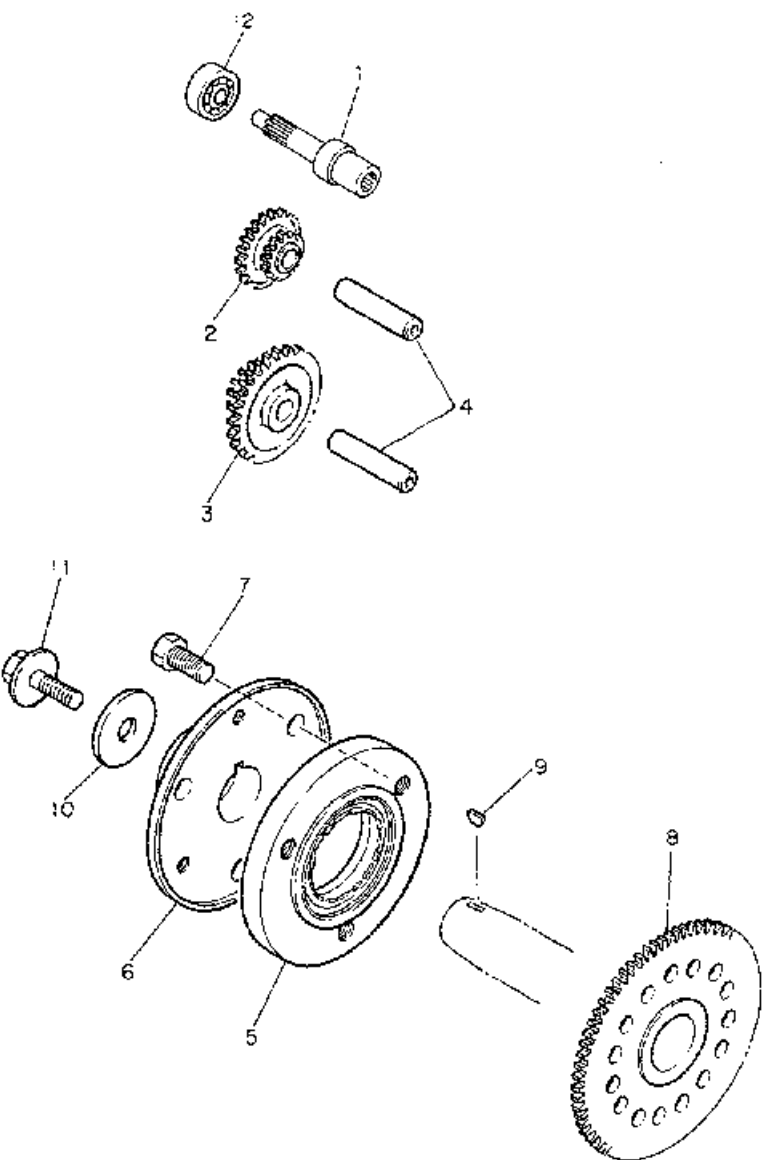 


5RT1300-2150

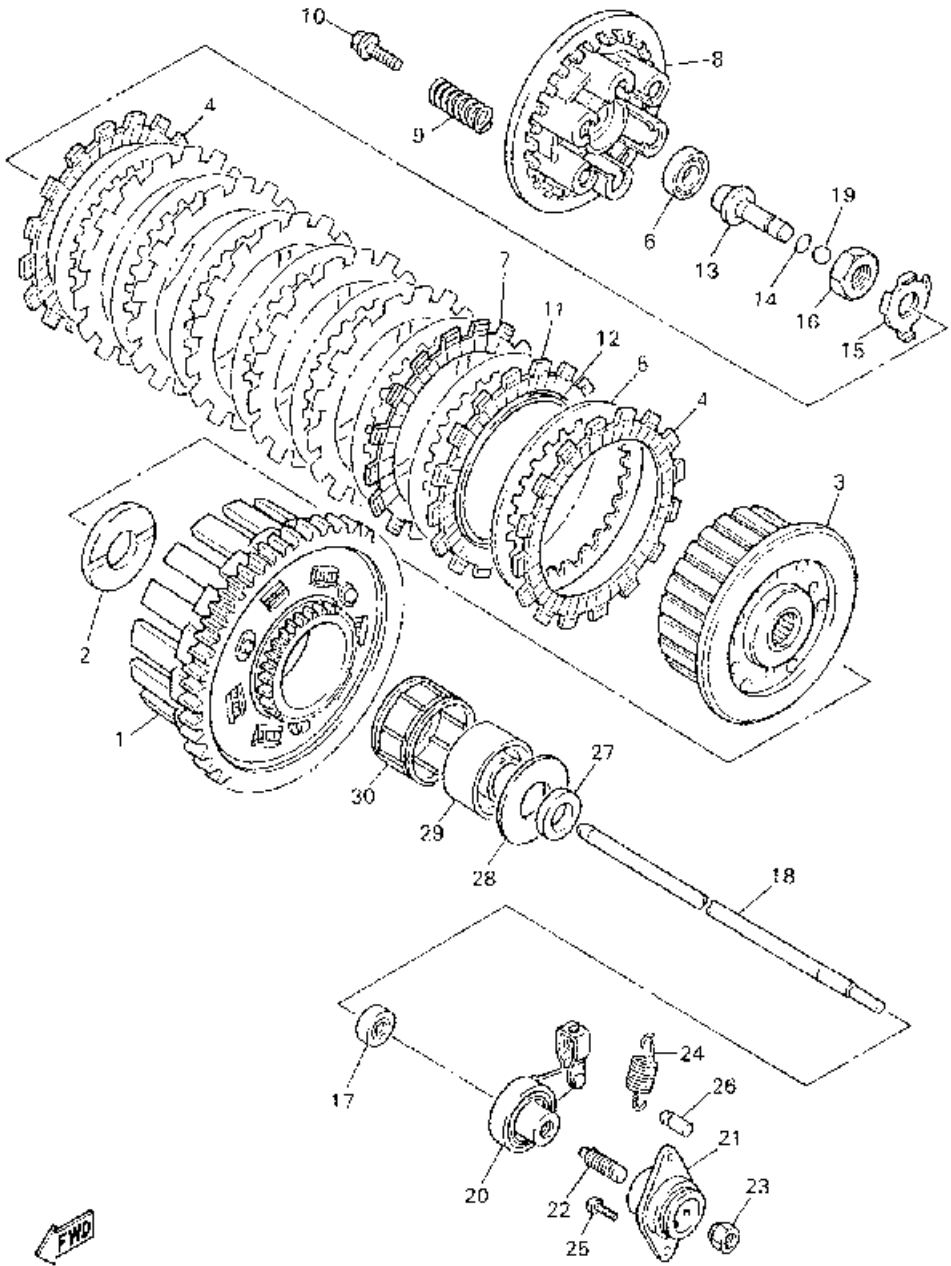 

5CM7351-0160

Ref No	Part No	Description
01	4JH-16150-00-00	Primary Driven Gear Comp.
02	1WG-16154-00-00	Plate, Thrust 1
03	5DM-16371-10-00	Boss, Clutch
04	3JD-16321-00-00	Plate, Friction
05	1LX-16324-00-00	Plate, Clutch 1
06	93306-00105-00	Bearing (b6001)
07	4JH-16321-00-00	Plate, Friction
08	4JH-16351-00-00	Plate, Pressure 1
09	90501-22001-00	Spring, Compression
10	90159-06092-00	Screw, With Washer
11	3JD-16331-00-00	Plate, Friction 2
12	3JD-16383-00-00	Spring, Clutch Boss
13	4JH-16356-00-00	Rod, Push 1
14	93210-48364-00	O-ring
15	90215-18225-00	Washer, Lock
16	90170-18221-00	Nut
17	93109-08058-00	Oil Seal (sd07 8-21-5.5 Hs)
18	4JH-16357-00-00	Rod, Push 2
19	93505-16006-00	Ball
20	4JH-16340-00-00	Push Lever Assy
21	1WG-16304-00-00	Ball Screw Housing Assy
22	90113-08021-00	Bolt, Set
23	90179-08179-00	Nut
24	90506-11488-00	Spring, Tension
25	90157-05065-00	Screw, Pan Head
26	132-16346-00-00	Hook, Spring
27	90387-212R3-00	Collar
28	1WG-16164-00-00	Plate, Thrust 2
29	1WG-16181-00-00	Spacer 1
30	93310-345R8-00	Bearing

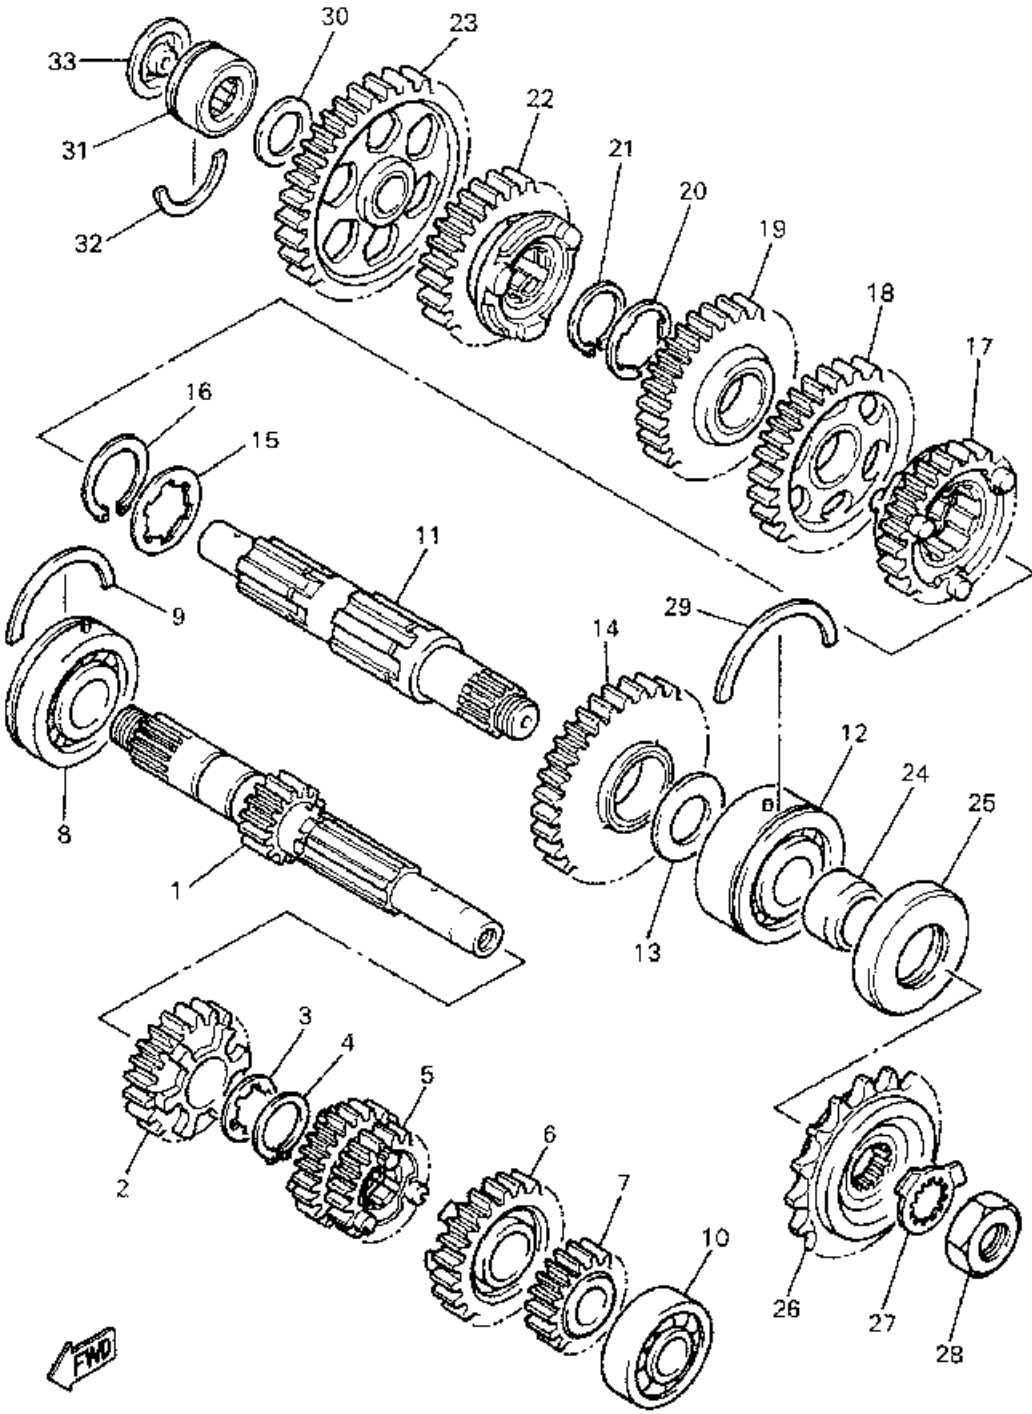 


Ref No	Part No	Description
01	4JH-17411-00-00	Axle, Main (13t)
02	4TV-17151-00-00	Gear, 5th Pinion (21t)
03	90209-22191-00	Washer
04	93440-25084-00	Circlip
05	4JH-17131-00-00	Gear, 3rd/4th Pinion (22t/21t)
06	4TV-17161-00-00	Gear, 6th Pinion (27t)
07	4TV-17121-00-00	Gear, 2nd Pinion (19t)
08	93306-37208-00	Bearing
09	93440-54152-00	Circlip
10	93306-20464-00	Bearing
11	4TV-17421-00-00	Axle, Drive
12	93305-20509-00	Bearing
13	4TV-17417-00-00	Shim 1
14	4JH-17221-00-00	Gear, 2nd Wheel (37t)
15	90209-27336-00	Washer
16	93440-30077-00	Circlip
17	4TV-17261-00-00	Gear, 6th Wheel (29t)
18	4JH-17231-00-00	Gear, 3rd Wheel (34t)
19	4JH-17241-00-00	Gear, 4th Wheel (28t)
20	90209-22191-00	Washer
21	93440-25084-00	Circlip
22	4TV-17251-00-00	Gear, 5th Wheel (25t)
23	4JH-17211-00-00	Gear, 1st Wheel (37t)
24	90387-2504A-00	Collar
25	93102-35368-00	Oil Seal
26	4TV-17460-00-00	Sprocket, Drive (15t)
27	90215-21022-00	Washer, Lock
28	90179-18020-00	Nut
29	93440-52014-00	Circlip
30	90201-20276-00	Washer, Plate (1.0t)
31	93311-42045-00	Bearing (20ng3315ne)
32	278-17425-00-00	Circlip 2
33	4G0-17433-01-00	Nozzle




4JH351-4170

Ref No	Part No	Description
01	5RT-18540-00-00	Shift Cam Assy
02	90501-06022-00	• . Spring, Compression
03	4UN-18542-00-00	• . Point, Neutral
04	4UN-18566-00-00	• . Plate, Side 2
05	90149-05321-00	• . Screw
06	4JH-18531-01-00	Bar, Shift Fork Guide 1
07	4JH-18535-00-00	Bar, Shift Fork Guide 2
08	4JH-18511-00-00	Fork, Shift 1
09	4JH-18512-00-00	Fork, Shift 2
10	4JH-18513-00-00	Fork, Shift 3
11	1WG-18536-00-00	Stopper, Shift Bar
12	1HX-18127-00-00	Stopper, Screw
13	90508-23007-00	Spring, Torsion
14	1WG-18562-00-00	Plate, Stopper 2
15	5RT-18140-00-00	Stopper Lever Assy
16	90109-063F7-00	Bolt
17	95827-06016-00	Bolt, Flange

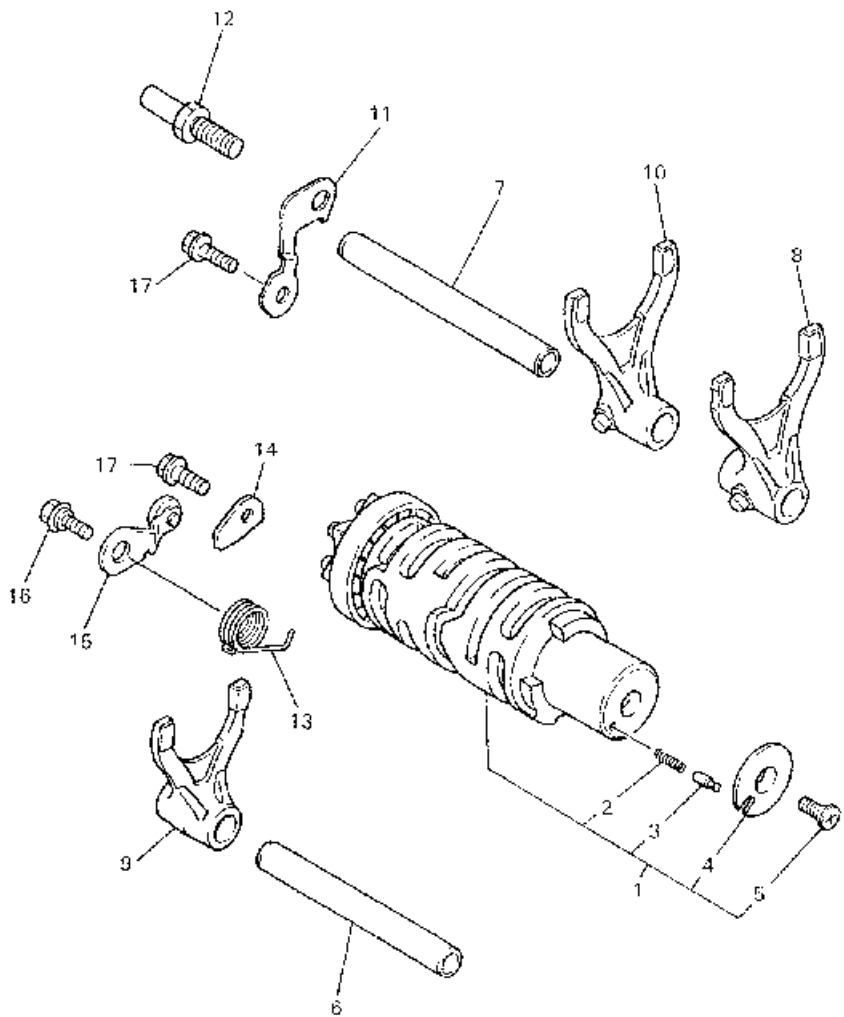 


4YR010-7180

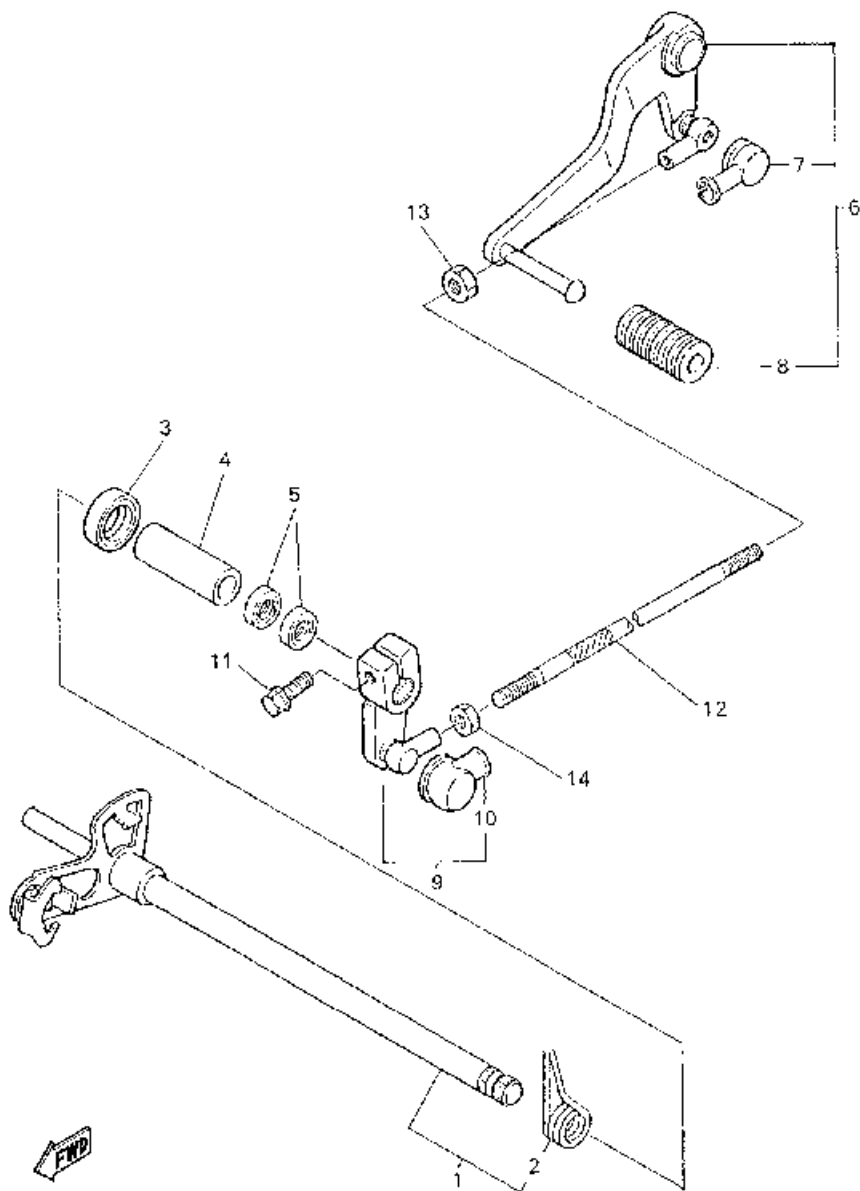 


5DM351-8190

Ref No	Part No	Description
01	5DM-18101-00-00	Shift Shaft Assy
02	90508-32007-00	• . Spring, Torsion
03	93102-12106-00	Oil Seal (sd 12-22-5 Hs)
04	90560-12211-00	Spacer
05	93109-12075-00	Oil Seal
06	1WG-18110-01-00	Shift Pedal Assy
07	2H9-18154-00-00	• . Cover, Dust
08	5EB-18113-00-00	• . Cover, Shift Pedal
09	3LN-18130-00-00	Shift Shaft Assy
10	2H9-18154-00-00	• . Cover, Dust
11	97024-06020-00	Bolt
12	2GV-18115-00-00	Rod, Shift
13	90170-06228-00	Nut(counter Clockwise)
14	95304-06700-00	Nut

Ref No	Part No	Description
01	5RT-21110-00-00	Frame Comp.
02	5DM-21400-00-00	Engine Bracket Comp.
03	4ES-22129-00-00	• . Cover, Thrust 2
04	90387-1013M-00	Collar
05	22W-22129-00-00	Cover, Thrust 2
06	4HM-21318-00-00	Stay, Engine 5
07	95814-10090-00	Bolt, Flange
08	95814-10080-00	Bolt, Flange
09	90105-085A5-00	Bolt, Flange
10	95817-08014-00	Bolt, Flange
11	90105-10731-00	Bolt, Flange
12	95817-10170-00	Bolt, Flange
13	95707-10500-00	Nut, Flange
14	95707-08500-00	Nut, Flange
15	90464-30252-00	Clamp
16	3SX-2135F-00-00	Cover
17	4YR-21245-00-00	Box
18	90269-07076-00	Rivet
19	5DM-24216-01-00	Stay
20	31A-24188-01-00	Mold, Fuel Tank
21	95807-06010-00	Bolt, Flange
22	5DM-21147-01-00	Bracket, Air Cleaner 1
23	95027-06012-00	Bolt, Flange
24	4SV-21654-11-00	Wire
25	4SV-21654-01-00	Wire
26	90206-08051-00	Washer, Wave
27	90109-061F3-00	Bolt
28	90201-06043-00	Washer, Plate
29	3YJ-24481-00-00	Plug
30	31A-24188-01-00	Mold, Fuel Tank
31	4YR-2137Y-01-00	Guide, Air
32	90464-13073-00	Clamp
33	90269-06063-00	Rivet
34	3FY-21575-01-00	Seal 1
35	5DM-21346-00-00	Bracket, Tank Fitting
36	5DM-24181-00-00	Damper, Locating 1
37	5DM-21296-00-00	Nut
38	90387-06299-00	Collar
39	95027-06025-00	Bolt, Flange

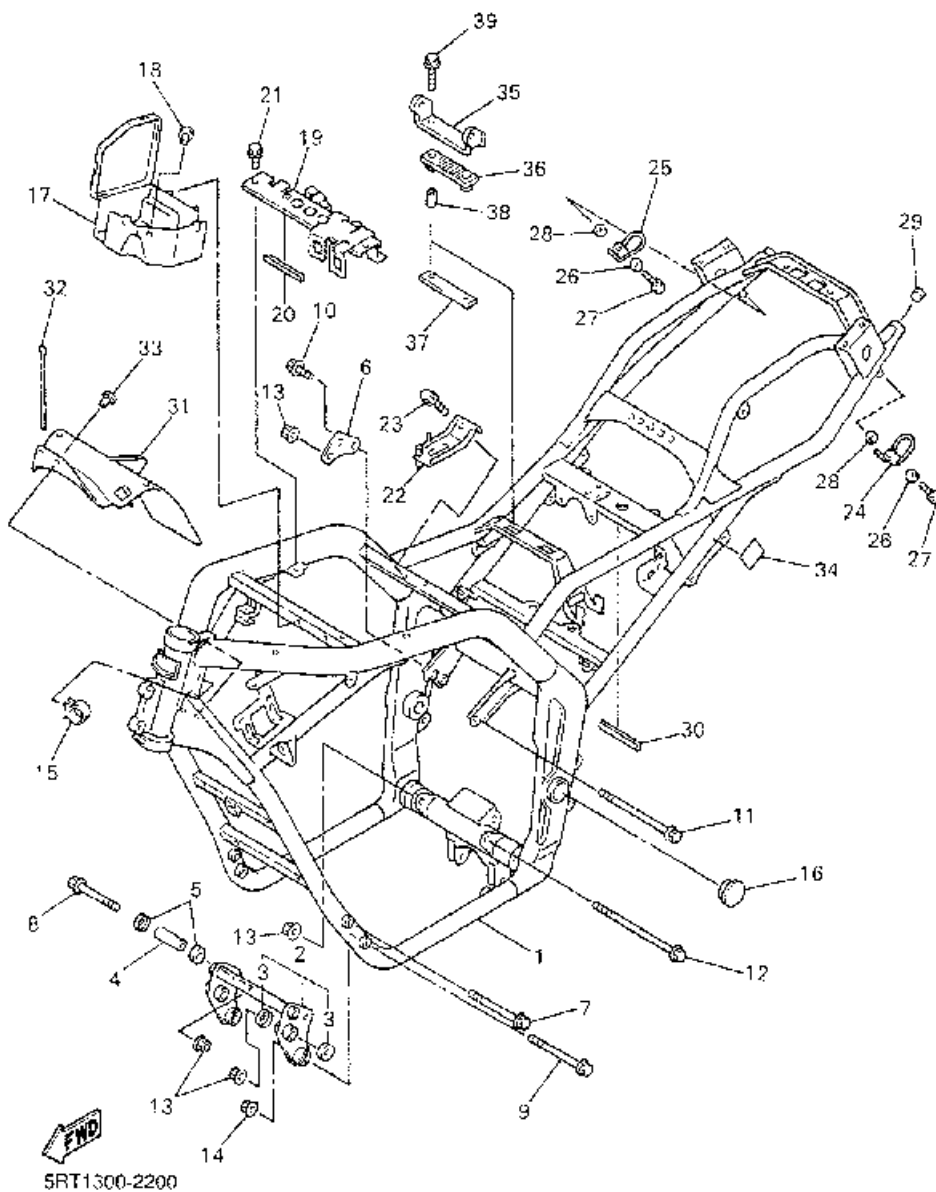 


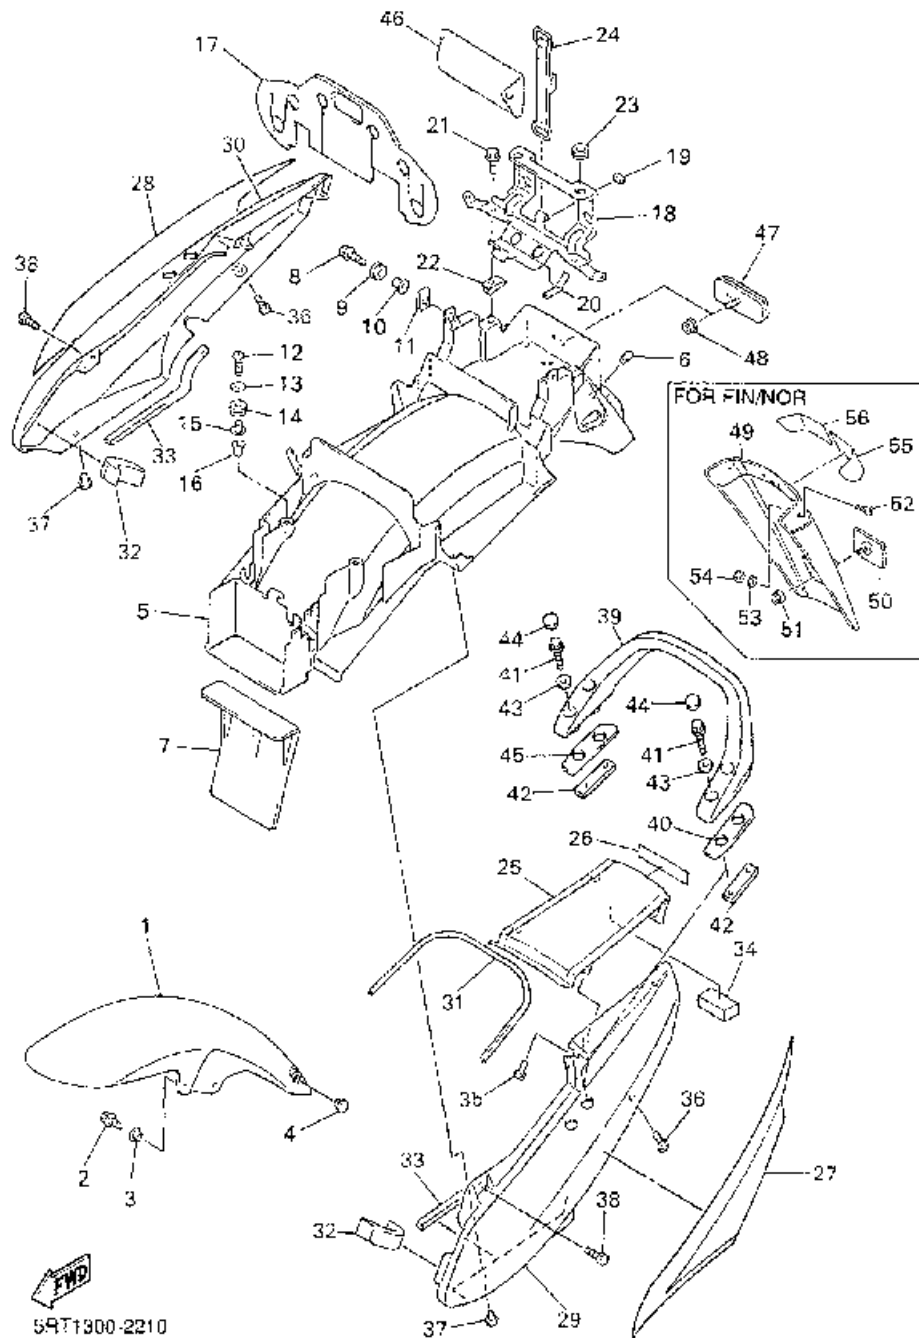 


Ref No	Part No	Description
01	3MA-21511-21-PC	Fender, Front
01	3MA-21511-21-PF	Fender, Front
01	3MA-21511-21-4B	Fender, Front
02	90119-06044-00	Bolt, With Washer
03	90387-06681-00	Collar
04	90338-12192-00	Plug
05	4YR-21611-01-00	Fender, Rear
05	4YR-21611-21-00	Fender, Rear
06	4G0-21639-00-00	Damper 2
07	5DM-21621-00-00	Flap
08	90119-06097-00	Bolt, With Washer
09	90480-16616-00	Grommet
10	90387-065J6-00	Collar
11	90183-06023-00	Nut, Spring
12	97707-60025-00	Screw, Tapping
13	90201-06557-00	Washer, Plate
14	90480-14052-00	Grommet
15	90387-06052-00	Collar
16	90338-08226-00	Plug
17	4YR-21691-10-00	Flap
18	4YR-2117E-00-00	Bracket, Taillight
19	1HX-28227-00-00	Damper 2
20	5H0-8235Y-M0-00	Damper
21	95807-06012-00	Bolt, Flange
22	90183-06023-00	Nut, Spring
23	90480-14323-00	Grommet
24	26L-82131-00-00	Band, Battery
25	4YR-21651-00-P6	Cover, Rear Fender
25	4YR-21651-00-P7	Cover, Rear Fender
25	4YR-21651-00-4B	Cover, Rear Fender
26	99241-00100-00	Emblem, Yamaha
26	99244-00100-00	Emblem, Yamaha
26	99246-00100-00	Emblem, Yamaha
27	5RT-2173E-00-00	Graphic 1
27	5RT-2173E-10-00	Graphic 1
27	5RT-2173E-30-00	Graphic 1
28	5RT-2173F-00-00	Graphic 2
28	5RT-2173F-10-00	Graphic 2
28	5RT-2173F-30-00	Graphic 2
29	5DM-2163A-10-P4	Cover, Rear Fender 1
29	5DM-2163A-10-P5	Cover, Rear Fender 1
29	5DM-2163A-10-4B	Cover, Rear Fender 1
30	5DM-2163E-10-P4	Cover, Rear Fender 2
30	5DM-2163E-10-P5	Cover, Rear Fender 2
30	5DM-2163E-10-4B	Cover, Rear Fender 2
31	42N-28376-00-00	Trim
32	4YR-21639-00-00	Damper 2
33	4BP-24737-00-00	Damper, Seat
34	5RT-2472F-00-00	Support, Tail Cover
35	97707-50012-00	Screw, Tapping
36	90154-05059-00	Screw, Binding
37	90269-07076-00	Rivet
38	90109-063F1-00	Bolt
39	5DM-24773-10-P3	Handle, Seat

FENDER

Ref No	Part No	Description
39	5DM-24773-10-P4	Handle, Seat
39	5DM-24773-10-4B	Handle, Seat
40	5DM-24732-00-00	Plate
41	90105-08016-00	Bolt, Washer Based
42	5RT-21295-00-00	Nut
43	90201-094G1-00	Washer, Plate
44	5DM-2143A-00-00	Cap
45	5DM-24732-10-00	Plate
46	4YR-28100-00-00	Tool Kit
47	3Y6-85130-02-00	Rear Reflector Assy
48	95707-05500-00	Nut, Flange
49	3GM-21621-00-00	Flap
50	23W-85150-00-00	Panel, Side
51	95707-05500-00	Nut, Flange
52	90149-04278-00	Screw
53	90201-04018-00	Washer, Plate
54	95607-04100-00	Nut, U
55	3GM-21649-00-00	Damper
56	3GM-21649-10-00	Damper

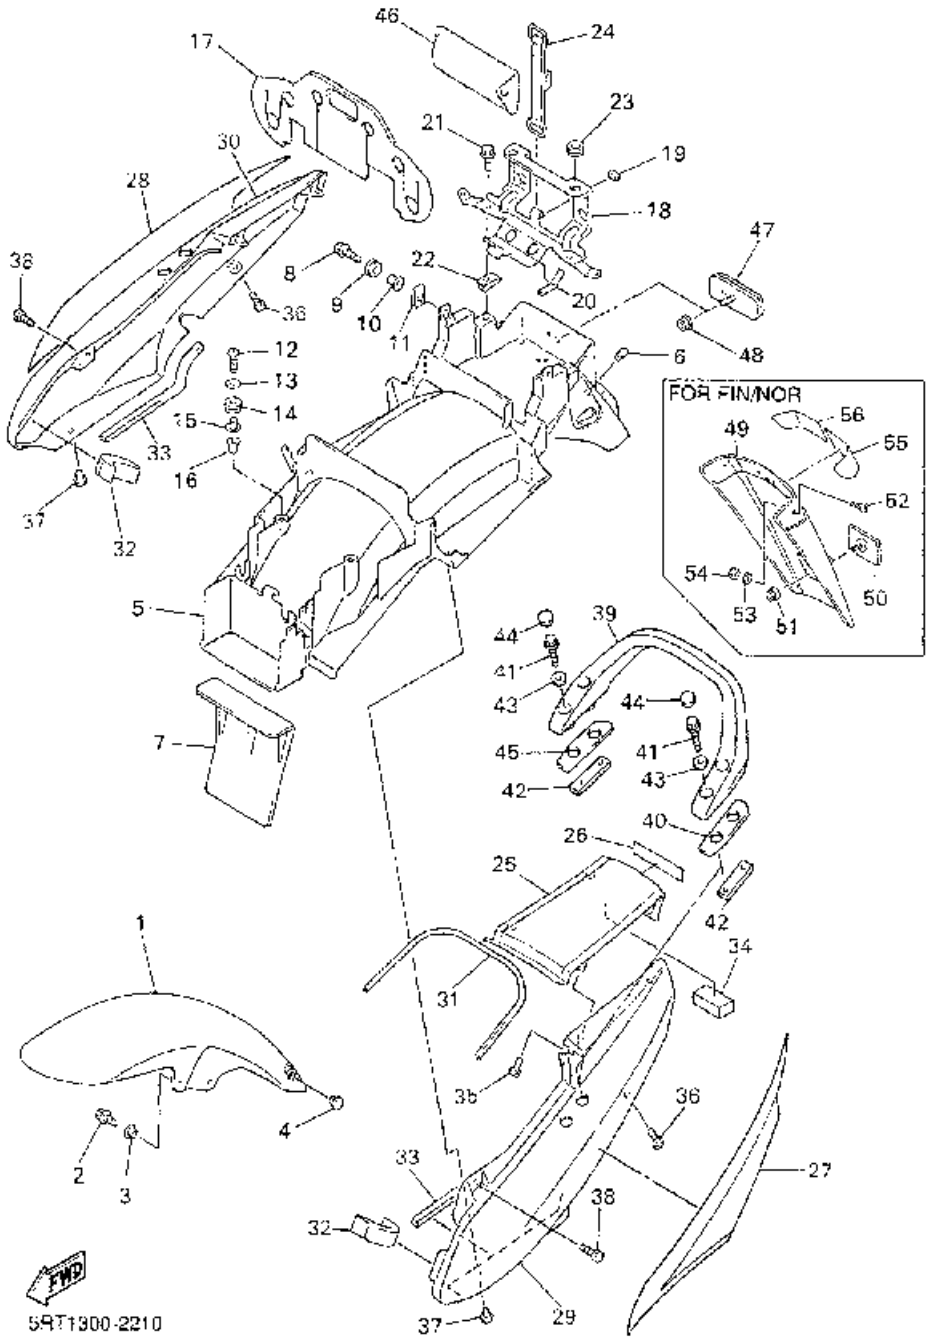 


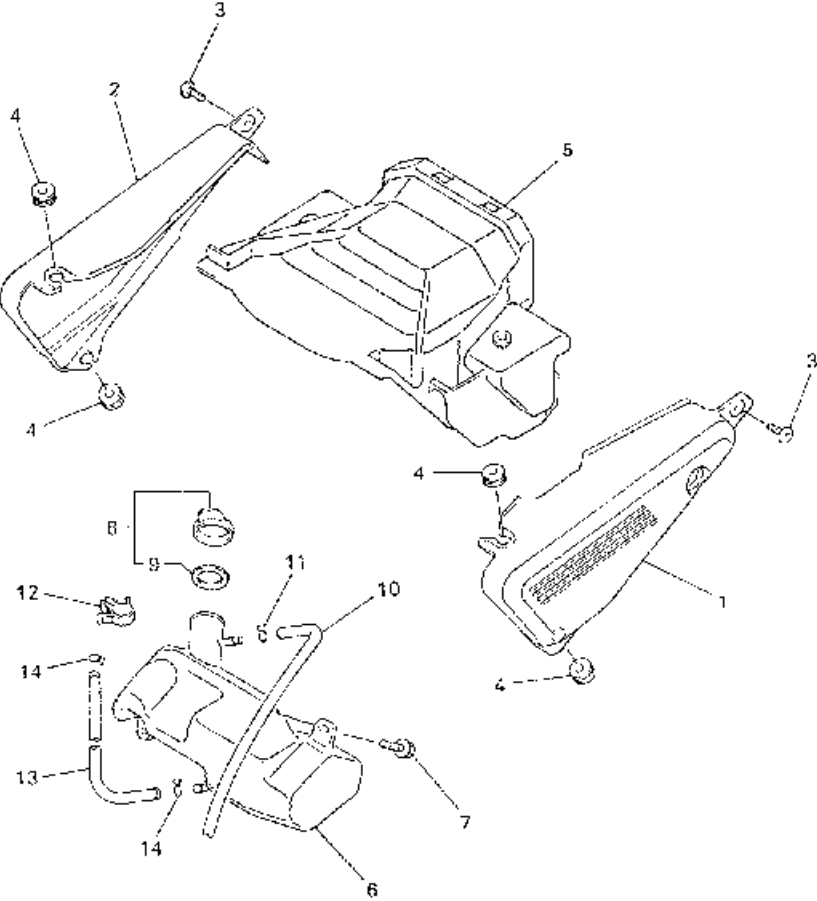 

5DM351-8220


Ref No	Part No	Description
01	4YR-21711-00-00	Cover, Side 1
02	4YR-21721-00-00	Cover, Side 2
03	90149-06298-00	Screw
04	90480-12320-00	Grommet
05	5DM-2172W-00-00	Cover
06	4YR-21871-00-00	Tank, Recovery
07	90119-06074-00	Bolt, With Washer
08	1AA-21815-00-00	Cap
09	1AA-21874-00-00	• . Gasket
10	90445-09353-00	Hose (I520)
11	90467-08003-00	Clip
12	90464-15157-00	Clamp
13	90445-081K8-00	Hose (I780)
14	90467-08075-00	Clip

Ref No	Part No	Description
01	5RT-22110-00-00	Rear Arm Comp.
02	5RT-22184-00-00	Bush
03	93320-32403-00	Bearing
04	47X-22129-00-00	Cover, Thrust 2
05	4YR-22141-00-00	Shaft, Pivot
06	90185-16127-00	Nut, Self-locking
07	90201-160F6-00	Washer, Plate
08	4KM-2217A-00-00	Arm, Relay
09	93317-42060-00	Bearing
10	90387-100T8-00	Collar
11	90105-10727-00	Bolt, Flange
12	95617-10100-00	Nut, U
13	90201-101J1-00	Washer, Plate
14	93317-41761-00	Bearing
15	90387-126T1-00	Collar
16	90101-12673-00	Bolt
17	90201-126A7-00	Washer, Plate
18	95617-12100-00	Nut, U
19	2KT-2217M-00-00	Arm 1
20	93317-31771-00	Bearing
21	93109-17071-00	Oil Seal
22	90387-127W0-00	Collar
23	90101-10659-00	Bolt
24	90201-101J1-00	Washer, Plate
25	95617-10100-00	Nut, U
26	5LV-22311-00-00	Case, Chain
27	90119-06203-00	Bolt, With Washer
28	4YR-22151-00-00	Seal, Guard
29	90119-06118-00	Bolt, With Washer
30	90387-06022-00	Collar

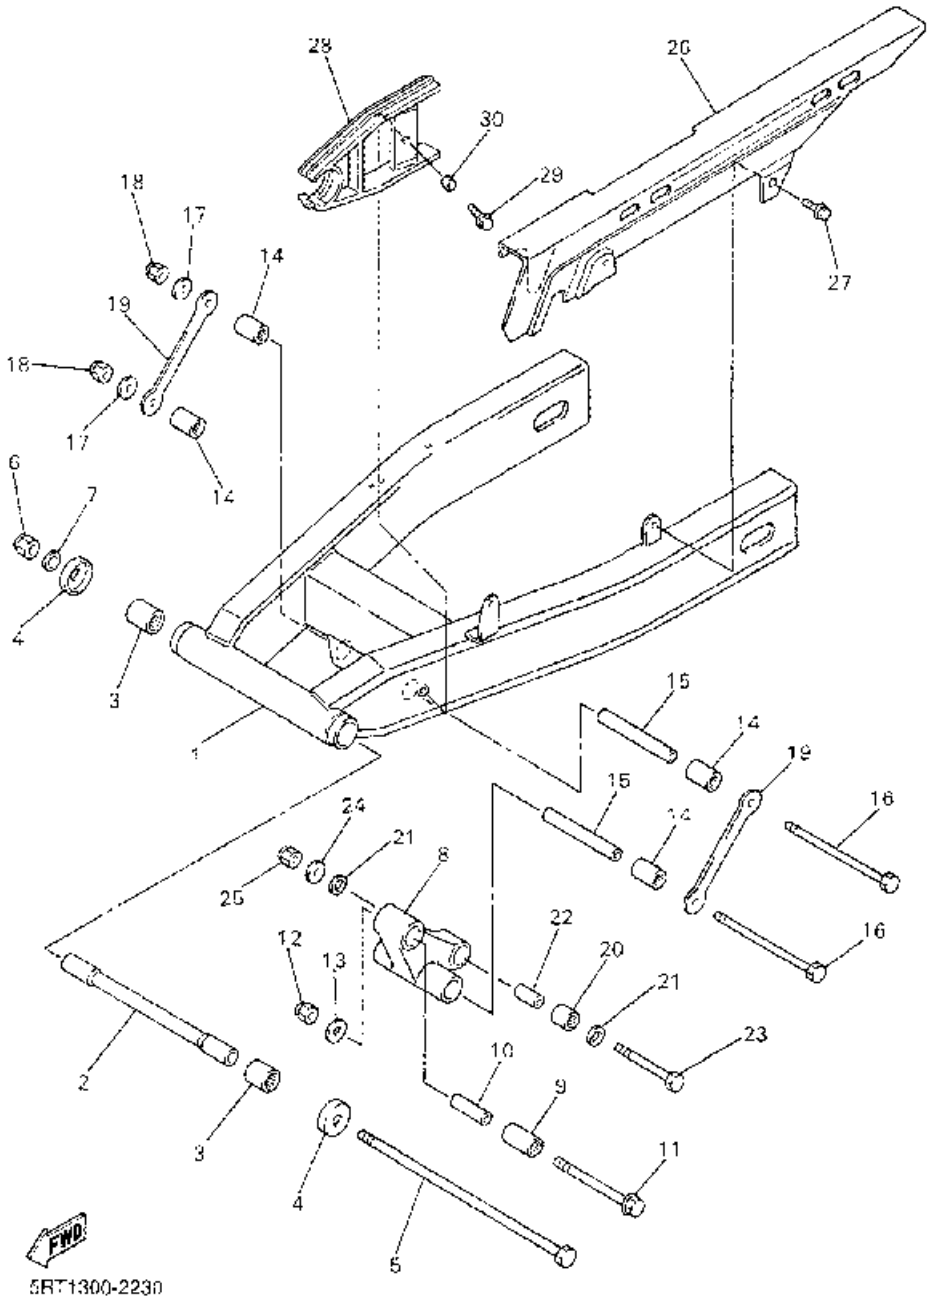 

5RT1300-2230


Ref No	Part No	Description
01	5DM-22210-00-00	Shock Absorber Assy, Rear
02	2YK-22216-00-00	• Bush, Rear Shock Absorber
03	90109-10554-00	Bolt
04	90201-101J1-00	Washer, Plate
05	95607-10100-00	Nut, U

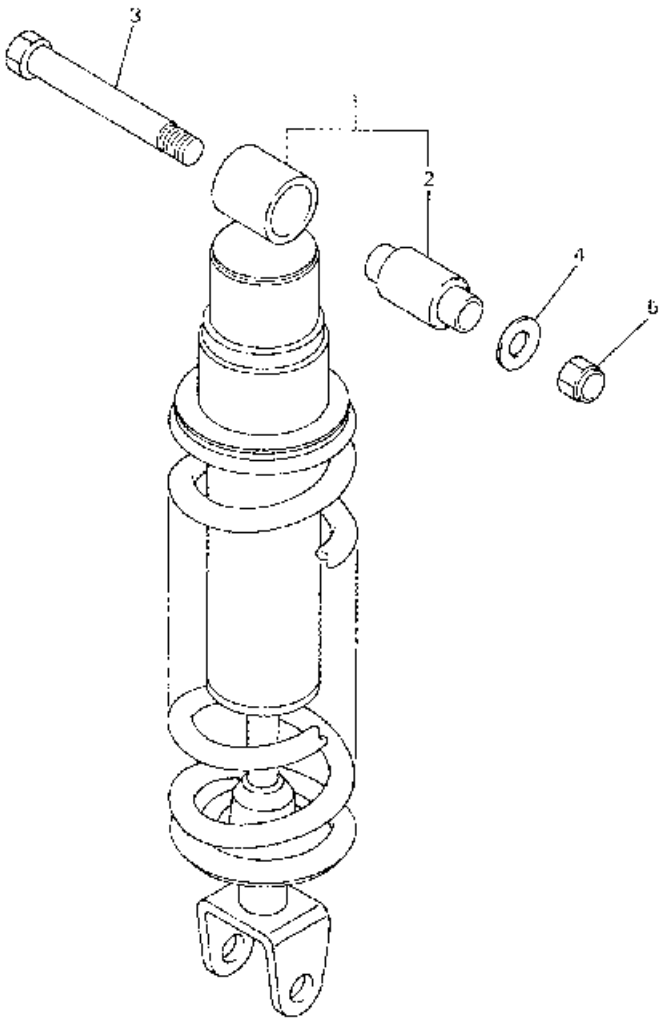 


4YR010-7240

STEERING

Ref No	Part No	Description
01	93399-99931-00	Bearing
02	93399-99932-00	Bearing
03	3FV-23462-00-00	Seal, Steering
04	90202-24190-00	Washer, Plate
05	26H-23418-01-00	Washer, Special
06	90179-25033-00	Nut
07	90202-26142-00	Washer, Plate
08	1W1-23416-00-00	Cover, Ball Race 2
09	90176-22081-00	Nut, Crown
10	90201-220T0-00	Washer, Plate
11	4YR-23435-10-00	Crown, Handle
12	91314-08030-00	Bolt
13	5RT-23389-00-00	Guide, Cable
14	90110-06226-00	Bolt, Hexagon Socket Head
15	4YR-23442-10-00	Holder, Handle Lower
16	95607-10200-00	Nut, U Flange
17	4H7-23441-00-98	Holder, Handle Upper
18	91317-08030-00	Bolt
19	341-23469-00-00	Cap, Bolt

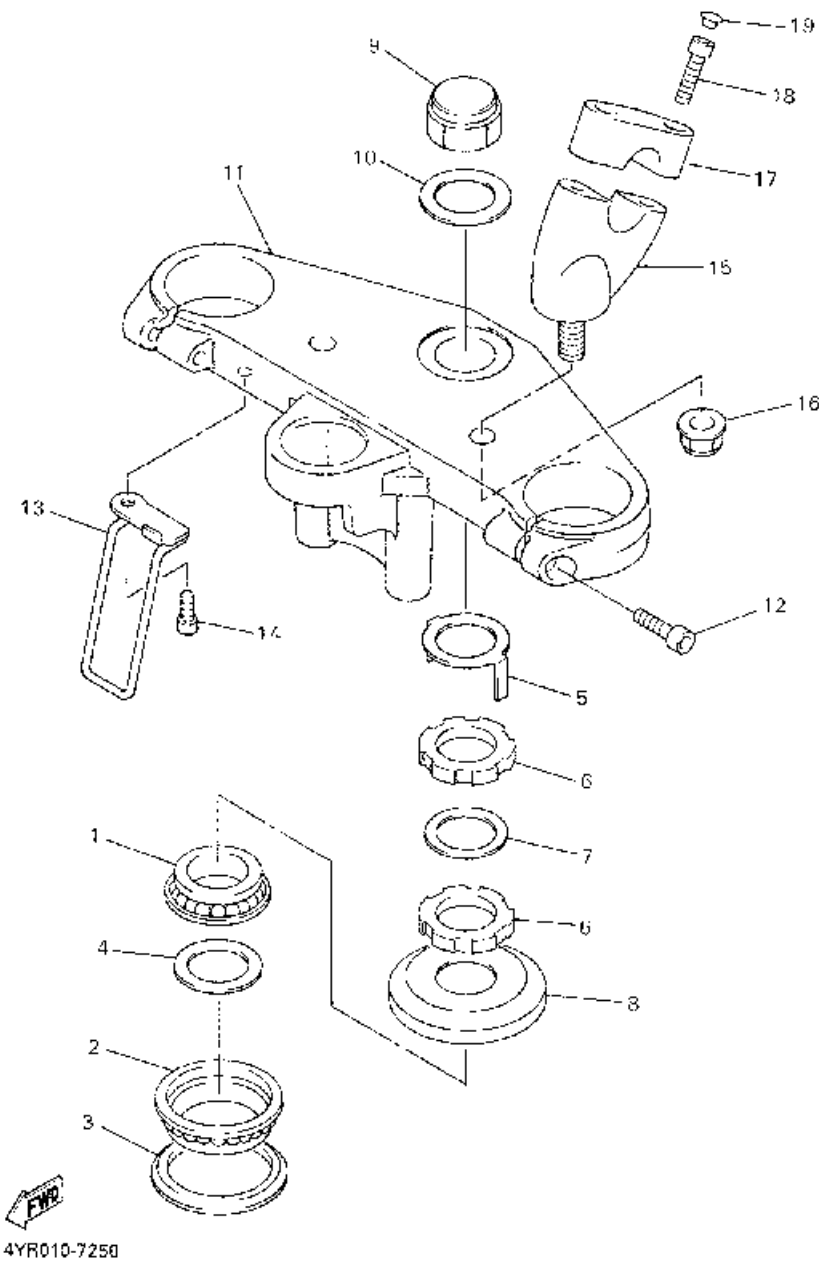 


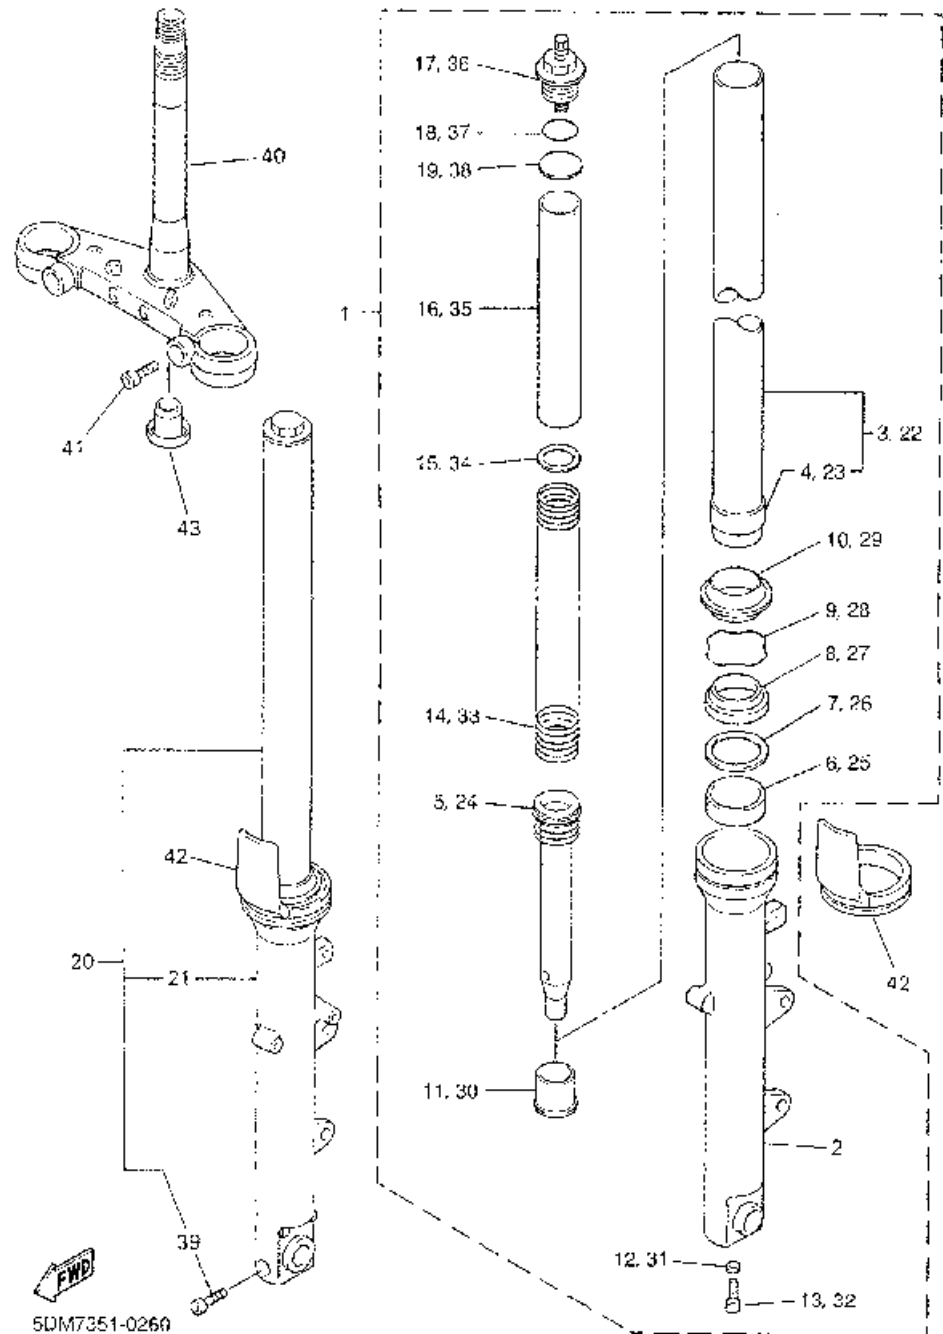 


FRONT FORK

Ref No	Part No	Description
01	5DM-23102-20-00	Front Fork Assy (l.h)
02	5DM-23126-20-00	. . Tube, Outer (left)
03	4YR-23110-00-00	. . Inner Tube Comp.1
04	4YR-23171-00-00	•• .. Piston, Front Fork
05	5DM-23170-10-00	. . Cylinder Comp., Front Fork
06	4FM-23125-40-00	. . Metal, Slide 1
07	36Y-23146-10-00	. . Washer, Oil Seal
08	4EB-23145-01-00	. . Oil Seal
09	26H-23156-00-00	. . Clip, Oil Seal
10	4EB-23144-00-00	. . Seal, Dust
11	4YR-23173-00-00	. . Spindle, Taper
12	509-23158-L0-00	. . Gasket
13	278-23181-50-00	. . Bolt, Hexagon Socket Head
14	5DM-23141-10-00	. . Spring, Front Fork
15	3EN-23149-50-00	. . Washer, Spring Upper
16	5EL-23118-00-00	. . Spacer
17	4JH-23111-00-00	. . Bolt, Cap
18	43F-23188-10-00	. . O-ring
19	2GH-23149-00-00	. . Washer, Spring Upper
20	5DM-23103-20-00	Front Fork Assy (r.h)
21	5DM-23136-20-00	. . Tube, Outer (right)
22	4YR-23110-00-00	. . Inner Tube Comp.1
23	4YR-23171-00-00	•• .. Piston, Front Fork
24	5DM-23170-10-00	. . Cylinder Comp., Front Fork
25	4FM-23125-40-00	. . Metal, Slide 1
26	36Y-23146-10-00	. . Washer, Oil Seal
27	4EB-23145-01-00	. . Oil Seal
28	26H-23156-00-00	. . Clip, Oil Seal
29	4EB-23144-00-00	. . Seal, Dust
30	4YR-23173-00-00	. . Spindle, Taper
31	509-23158-L0-00	. . Gasket
32	278-23181-50-00	. . Bolt, Hexagon Socket Head
33	5DM-23141-10-00	. . Spring, Front Fork
34	3EN-23149-50-00	. . Washer, Spring Upper
35	5EL-23118-00-00	. . Spacer
36	4JH-23111-00-00	. . Bolt, Cap
37	43F-23188-10-00	. . O-ring
38	2GH-23149-00-00	. . Washer, Spring Upper
39	91314-08040-00	. . Bolt
40	5DM-23340-00-00	Under Bracket Comp.
41	91317-10025-00	Bolt
42	4PU-2331G-00-00	Cover
43	4KM-23123-01-00	Cover, Lower 1

Ref No	Part No	Description
01	5RT-Y2410-10-04	Fuel Tank Comp.
01	5RT-Y2410-10-05	Fuel Tank Comp.
01	5RT-Y2410-10-06	Fuel Tank Comp.
02	5FY-2411B-00-00	• . Tuning Fork Mark
02	5FY-2411B-30-00	• . Tuning Fork Mark
02	5FY-2411B-40-00	• . Tuning Fork Mark
03	5DM-24191-00-00	Bracket, Fuel Tank 1
04	2GH-24181-00-00	Damper, Locating 1
05	2GH-24183-00-00	Damper, Locating 3
06	2GH-24186-00-00	Washer, Special
07	90387-06299-00	Collar
08	97027-06030-00	Bolt
09	92907-06600-00	Washer, Plate
10	90119-06213-00	Bolt, With Washer
11	4YR-24181-00-00	Damper, Locating 1
12	90387-061W9-00	Collar
13	91317-06110-00	Bolt
14	2VN-24500-01-00	Fuel Cock Assy 1
15	4X8-24512-00-00	• . O-ring
16	3AJ-24534-00-00	• . Seal, Cock
17	98507-03008-00	• . Screw
18	3AJ-24523-00-00	• . Valve Packing
19	90149-06008-00	Screw
20	90202-05193-00	Washer, Plate
21	5DM-24311-00-00	Pipe, Fuel 1
22	90467-11044-00	Clip
23	90464-44109-00	Clamp
24	5DM-24312-00-00	Pipe 2
25	1FK-24560-10-00	Filter Assy
26	90467-13073-00	Clip
27	1FK-24566-00-00	Bracket, Filter
28	5DM-24398-00-00	Band 1
29	90387-07391-00	Collar
30	95807-06020-00	Bolt, Flange
31	90445-104F3-00	Hose (I540)
32	90467-09006-00	Clip
33	5DM-24217-00-00	Cover
34	5JJ-24602-00-00	Cap Assy
35	90110-05112-00	Bolt, Hexagon Socket Head
36	91314-05010-00	Bolt
37	4YR-24183-01-00	Damper, Locating 3
38	3MA-82591-00-00	Band
39	4YR-24188-10-00	Mold, Fuel Tank
40	4YR-2414G-00-00	Seal
41	3FY-21575-01-00	Seal 1
42	5RT-13907-00-00	Fuel Pump Comp.
43	5DM-14294-00-00	Hose
44	5DM-14293-00-00	Cover 1
45	90467-13123-00	Clip
46	90467-11032-00	Clip
47	90467-11175-00	Clip

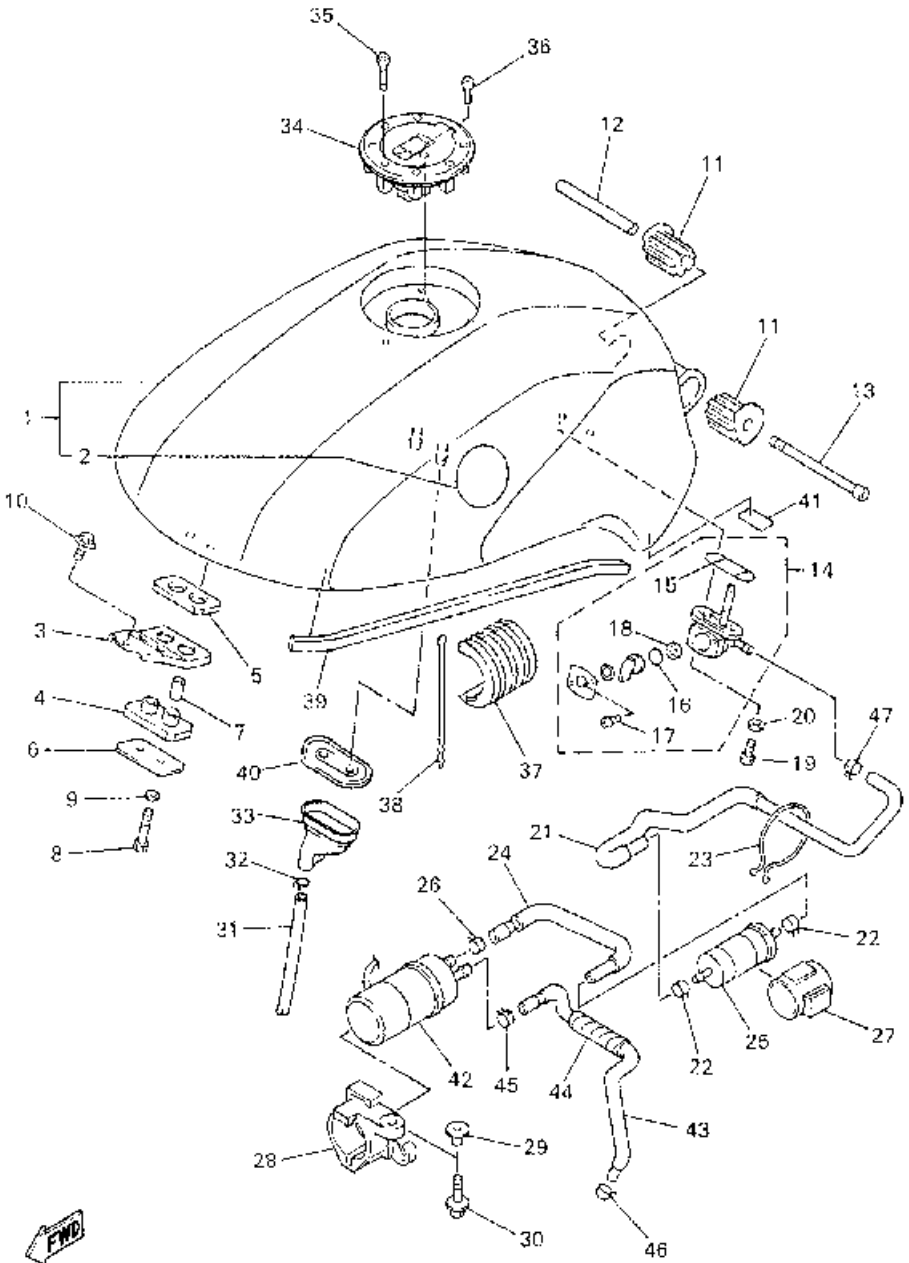 

5RT4300 B270

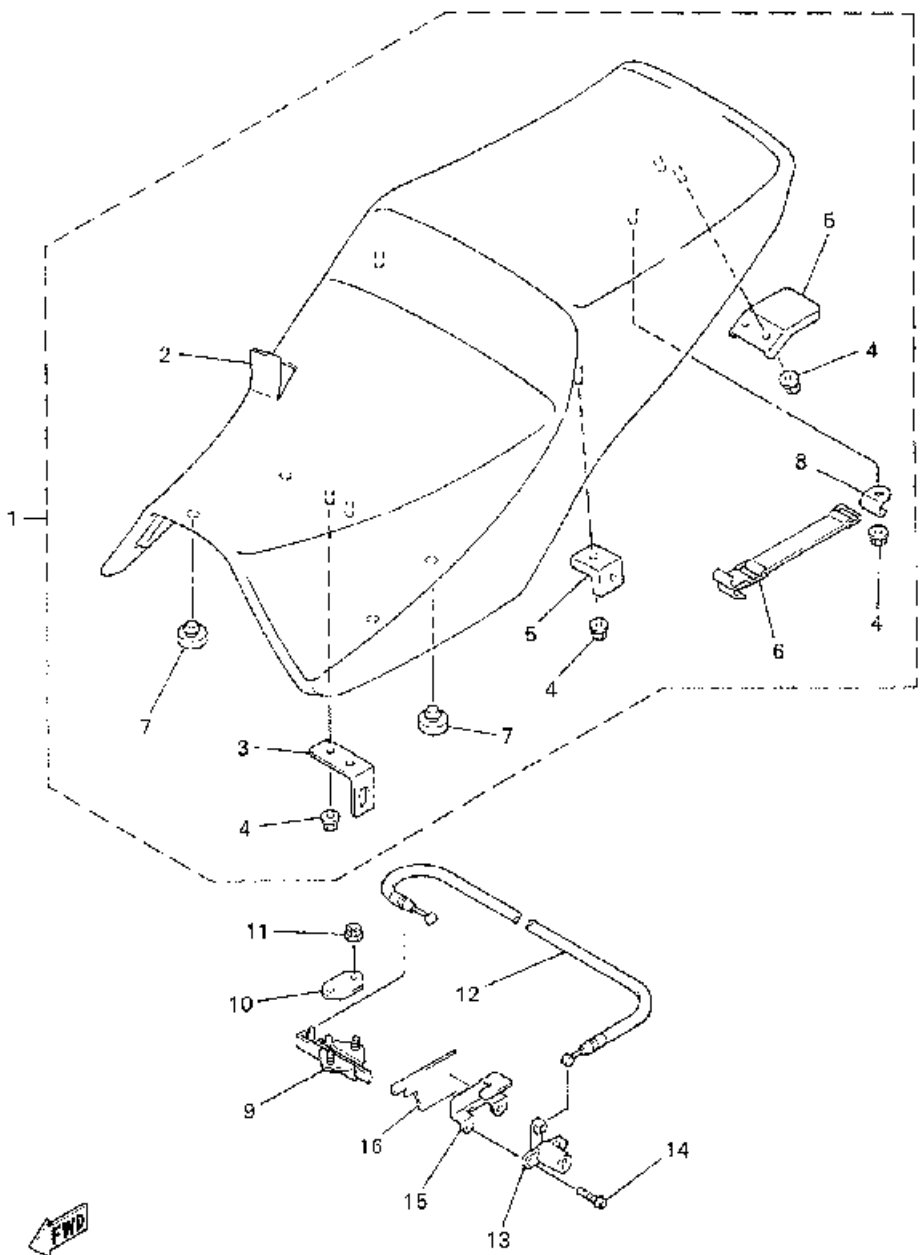 


Ref No	Part No	Description
01	5DM-24730-10-00	Double Seat Assy
02	5DM-24731-10-00	• . Cover, Seat
03	4HM-24728-00-00	• . Bracket, Seat
04	90179-06635-00	• . Nut
05	4YR-2471A-01-00	• . Stay, Seat
06	4YR-21376-00-00	• . Band, Tool
07	1T4-24741-00-00	• . Pad, Seat
08	4YR-24754-00-00	• . Hook, Seat
09	4BP-24780-00-00	Seat Lock Assy
10	4BP-24792-00-00	Plate
11	95707-06500-00	Nut, Flange
12	4YR-2478E-00-00	Cable, Seat Lock
13	2TV-W2470-00-00	Seat Lock Assy
14	90149-06308-00	Screw
15	4YR-2478X-01-00	Bracket, Seat Lock
16	5RT-24723-00-00	Damper, Seat




5RT1300-2280

Ref No	Part No	Description
01	4HM-25168-00-98	Cast Wheel, Front
02	90560-17358-00	Spacer
03	93306-20314-00	Bearing (b6203)
04	93102-23252-00	Oil Seal
05	94111-1712U-00	Tire (110/70zr17 54w D207f)
05	94111-1712W-00	Tire (110/70zr17 54w Bt57f)
06	93900-00030-00	Valve, Rim
07	5MT-25398-00-00	Balancer, Wheel (10g)
07	5MT-25398-10-00	Balancer, Wheel (20g)
07	5MT-25398-20-00	Balancer, Wheel (30g)
08	90387-177V5-00	Collar
09	3MA-25181-01-00	Axle, Wheel

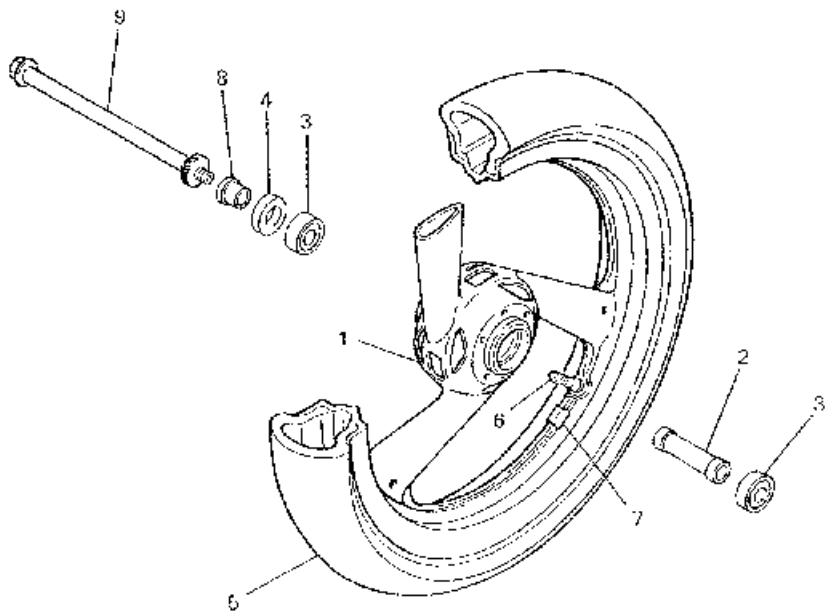 


4YR010-7290

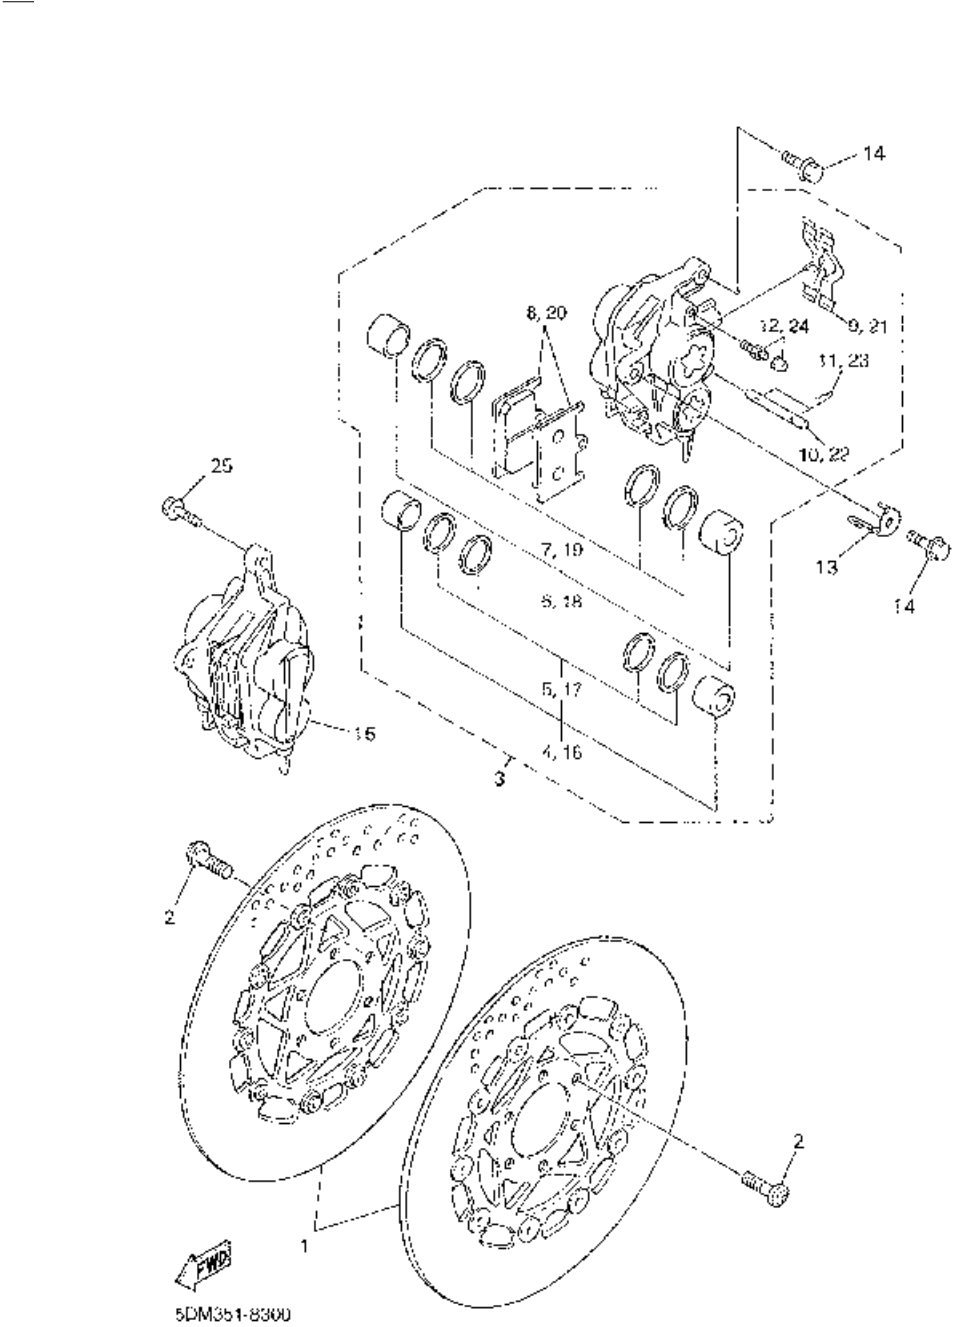 


Ref No	Part No	Description
01	4HM-2581T-11-00	Disc Brake Assy
02	90109-083G4-00	Bolt
03	5DM-2580T-00-00	Caliper Assy (left)
04	4SV-W0057-00-00	• . Piston Assy, Caliper
05	3MA-W0047-10-00	•• .. Caliper Seal Kit
06	4SV-W0057-10-00	• . Piston Assy, Caliper
07	3GM-W0047-10-00	•• .. Caliper Seal Kit
08	4SV-W0045-00-00	• . Brake Pad Kit
09	4SV-25919-00-00	• . Support, Pad
10	4SV-25924-00-00	• . Pin, Pad
11	3GM-25925-00-00	• . Clip
12	1J3-W0048-00-00	• . Bleed Screw Kit
13	4YR-23317-00-00	Holder, Cable
14	90105-10638-00	Bolt, Washer Based
15	5DM-2580U-00-00	Caliper Assy (right)
16	4SV-W0057-00-00	• . Piston Assy, Caliper
17	3MA-W0047-10-00	•• .. Caliper Seal Kit
18	4SV-W0057-10-00	• . Piston Assy, Caliper
19	3GM-W0047-10-00	•• .. Caliper Seal Kit
20	4SV-W0045-00-00	• . Brake Pad Kit
21	4SV-25919-00-00	• . Support, Pad
22	4SV-25924-00-00	• . Pin, Pad
23	3GM-25925-00-00	• . Clip
24	1J3-W0048-00-00	• . Bleed Screw Kit
25	90105-10638-00	Bolt, Washer Based

REAR WHEEL


Ref No	Part No	Description
01	4JH-25338-00-98	Cast Wheel, Rear
02	93306-20417-00	Bearing (b62042rs)
03	93102-28022-00	Oil Seal
04	90387-2004F-00	Collar
05	4FM-25364-00-00	Damper
06	94116-1712V-00	Tire (160/60zr17 69w D207)
06	94116-1712X-00	Tire (160/60zr17 69w Bt57r)
07	93900-00030-00	Valve, Rim
08	5MT-25398-00-00	Balancer, Wheel (10g)
08	5MT-25398-10-00	Balancer, Wheel (20g)
08	5MT-25398-20-00	Balancer, Wheel (30g)
09	4FM-25366-00-00	Clutch, Hub
10	93306-20644-00	Bearing
11	93106-40041-00	Oil Seal
12	90387-2004E-00	Collar
13	5DM-25448-10-00	Sprocket, Driven (48t)
14	90116-10575-00	Bolt, Stud
15	95607-10200-00	Nut, U Flange
16	94582-01110-00	Chain
17	4YR-25388-00-00	Puller, Chain 1
18	2GH-25389-00-00	Puller, Chain 2
19	95307-08600-00	Nut
20	92907-08200-00	Washer
21	1AE-25371-01-00	Bar, Tension
22	1JK-21268-00-00	Seal
23	90105-083A9-00	Bolt, Flange
24	95607-08200-00	Nut, Self-locking
25	4YR-25381-00-00	Axle, Wheel
26	90185-18167-00	Nut, Self-locking
27	90201-200P6-00	Washer, Plate
28	90201-180P5-00	Washer, Plate
29	90387-203U5-00	Collar
30	90387-2004D-00	Collar
31	4YR-25819-00-00	Bracket, Caliper

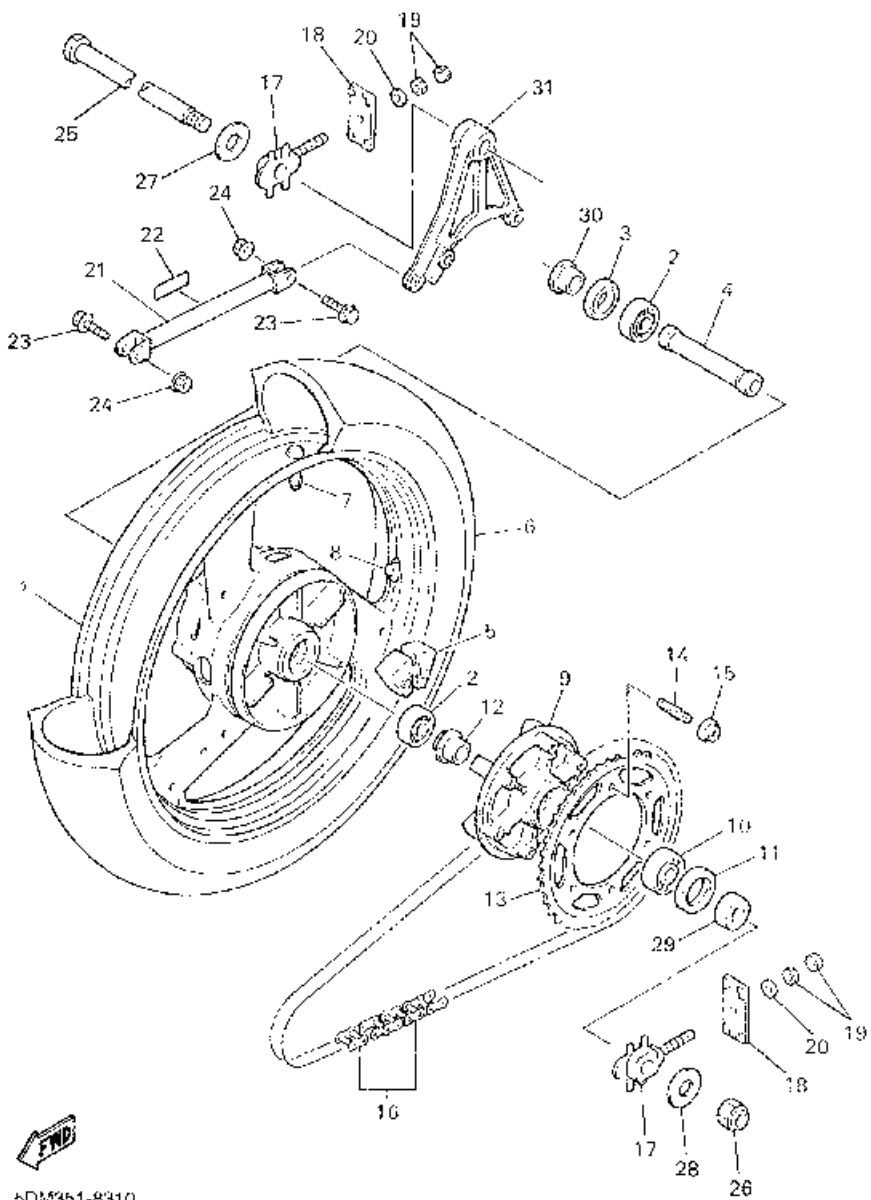 

5DM351-8310

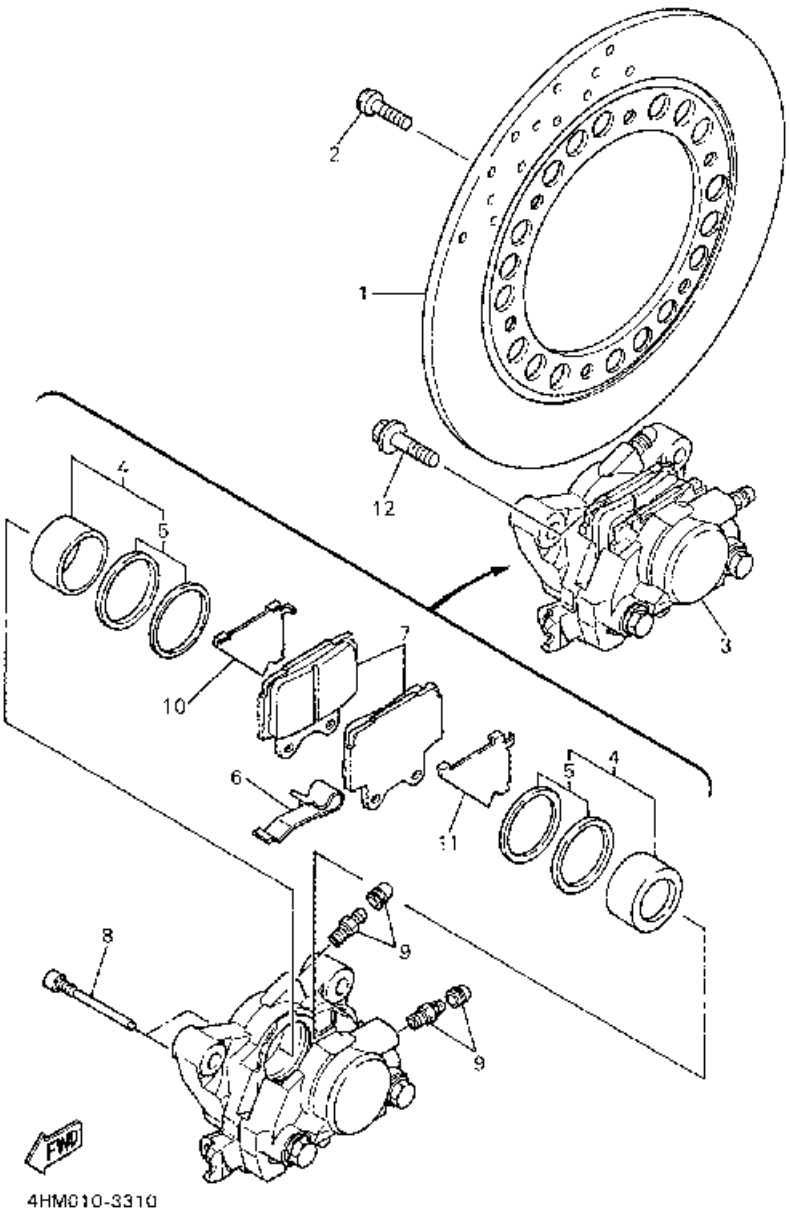 


Ref No	Part No	Description
01	4JH-2582W-00-00	Disc, Rear Brake 2
02	90109-083G4-00	Bolt
03	4HM-2580W-00-00	Caliper Assy, Rear 2
04	51L-W0057-00-00	• . Piston Assy, Caliper
05	51L-W0047-00-00	•• .. Caliper Seal Kit
06	51L-25919-00-00	• . Support, Pad
07	3TJ-W0046-00-00	• . Brake Pad Kit 2
08	4FL-25924-00-00	• . Pin, Pad
09	51L-W0048-00-00	• . Bleed Screw Kit
10	47X-25827-00-00	• . Shim, Caliper
11	47X-25827-10-00	• . Shim, Caliper
12	90105-10561-00	Bolt, Flange

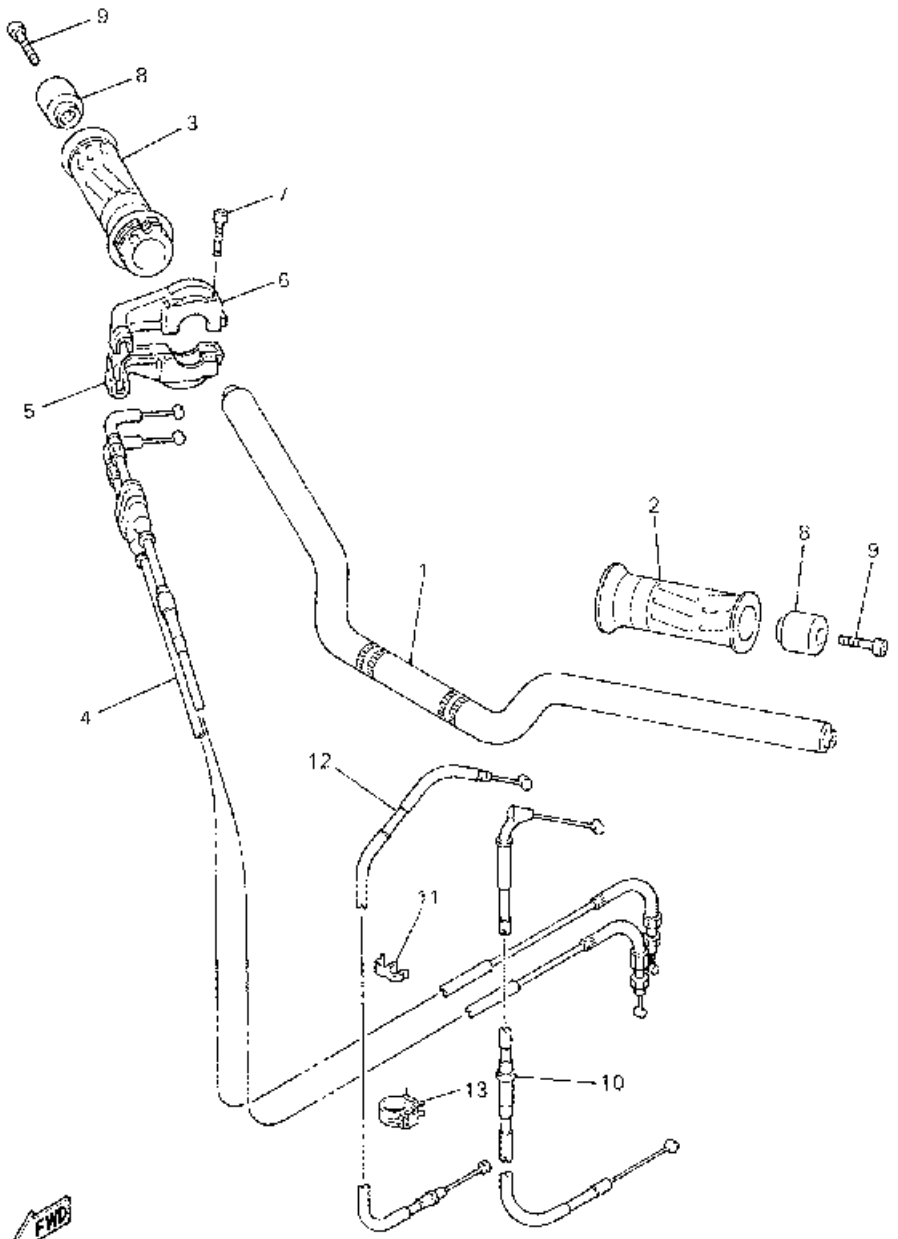 


4YR010-7330


Ref No	Part No	Description
01	5RT-26110-00-00	Handle Comp.
02	4YR-26241-01-00	Grip (left)
03	4YR-26240-01-00	Grip Assy
04	5RT-26302-00-00	Throttle Cable Assy
05	4KG-26281-00-00	Cap, Grip Upper
06	3XW-26282-01-00	Cap, Grip Lower
07	91317-05035-00	Bolt
08	4YR-26246-00-00	End, Grip
09	91317-06035-00	Bolt
10	5RT-26330-00-00	Starter Cable Assy
11	90468-15139-00	Clip
12	5RT-26335-00-00	Cable, Clutch
13	90464-15192-00	Clamp

Ref No	Part No	Description
01	5DM-W2587-01-00	Master Cylinder Sub Assy
02	5DM-W0041-50-00	• . Cylinder Kit, Master
03	4HM-W2585-01-00	• . Reservoir Cap Set
04	4HM-25854-00-00	• . Diaphragm, Reservoir
05	98706-04012-00	• . Screw, Flat Head
06	5EB-83922-01-00	Lever 2
07	3FV-2589F-00-00	Bolt, Lever
08	95606-06100-00	Nut, U
09	4HM-83980-00-00	Front Stop Switch Assy
10	98502-04012-00	Screw, Pan Head
11	92902-04100-00	Washer, Spring
12	92902-04600-00	Washer, Plate
13	4HM-25867-00-00	Bracket, Master Cylinder
14	91316-06020-00	Bolt
15	90338-09012-00	Plug
16	5DM-25872-00-00	Hose, Brake 1
17	5DM-25873-00-00	Hose, Brake 2
18	4YR-25874-00-00	Hose, Brake
19	1UA-82591-00-00	Band
20	90401-10159-00	Bolt, Union
21	90401-10160-00	Bolt, Union
22	90201-10118-00	Washer, Plate
23	3EN-25875-20-00	Holder, Brake Hose 1
24	2R8-25876-20-00	Holder, Brake Hose 2
25	95027-06025-00	Bolt, Flange
26	42H-25885-01-00	Joint
27	95027-06020-00	Bolt, Flange
28	4YR-82361-00-00	Clamp, Cord

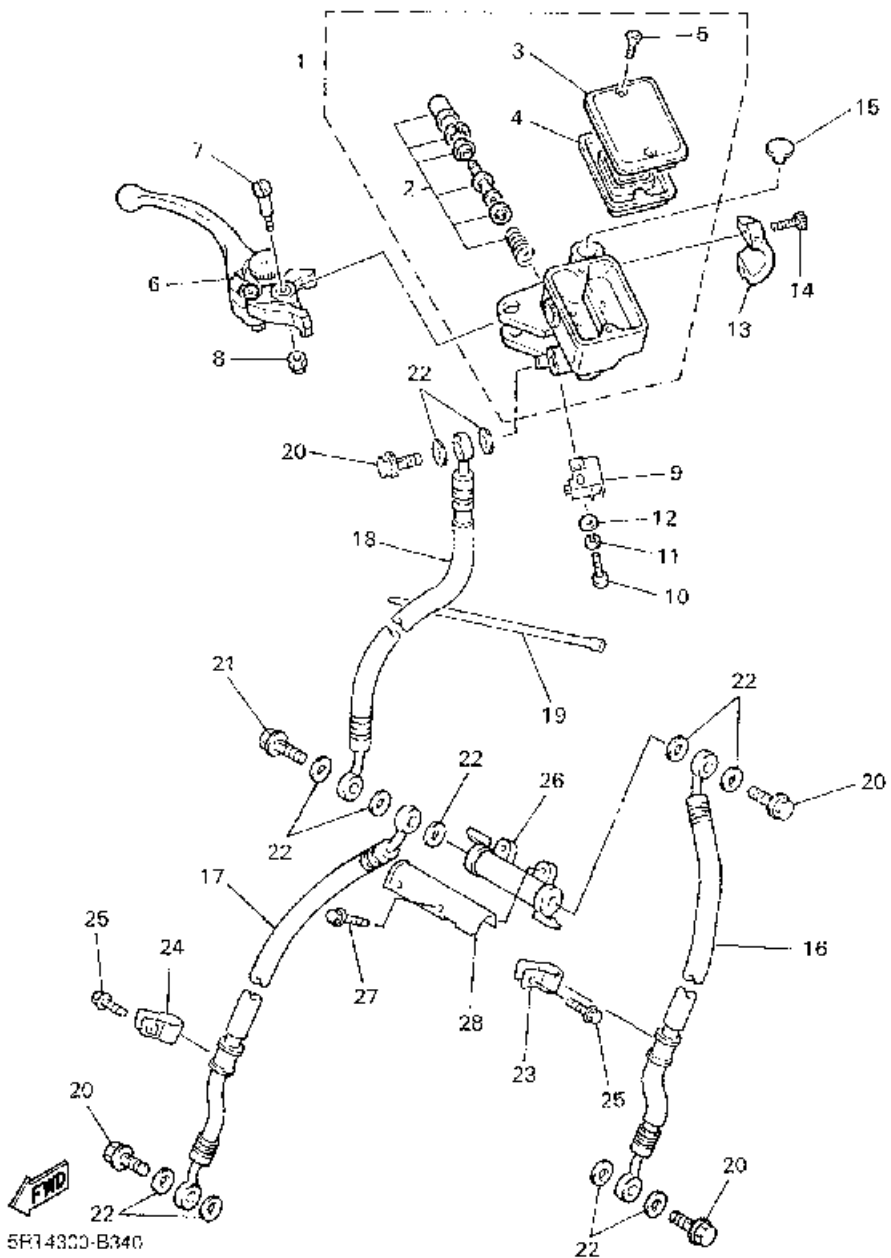 


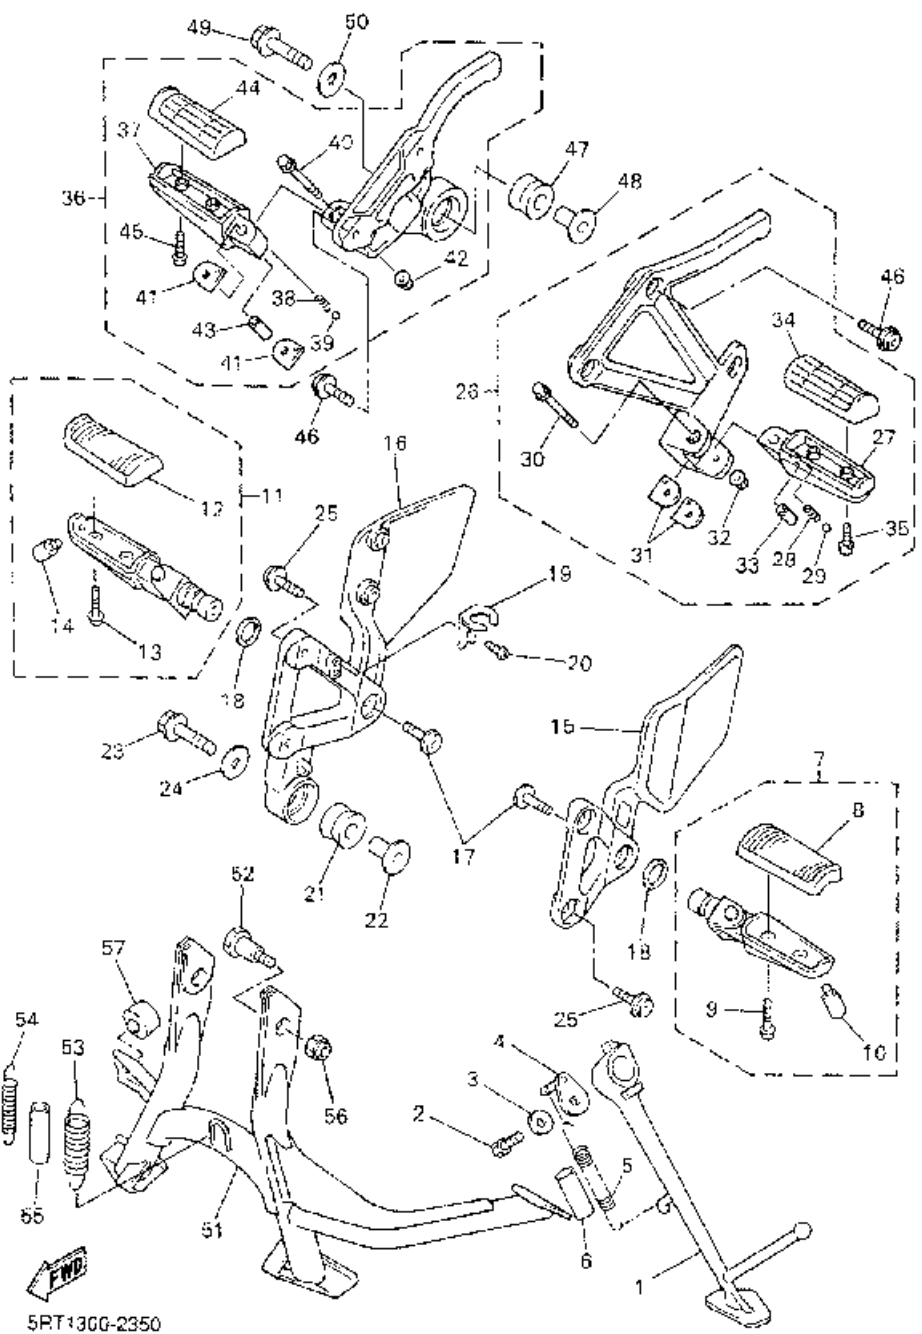 

Ref No	Part No	Description
01	4YR-27311-00-00	Stand, Side
02	90101-08662-00	Bolt
03	90201-081R9-00	Washer, Plate
04	36Y-27352-00-00	Hook, Side Stand
05	90506-20006-00	Spring, Tension
06	90445-197J2-00	Hose (I60)
07	5DM-27410-00-00	Front Footrest Assy (left)
08	4BP-27413-00-00	• . Cover, Footrest
09	90157-05079-00	• . Screw, Pan Head
10	4SV-27435-00-00	• . Bolt
11	5DM-27420-00-00	Front Footrest Assy (right)
12	4BP-27413-00-00	• . Cover, Footrest
13	90157-05079-00	• . Screw, Pan Head
14	4SV-27435-00-00	• . Bolt
15	4YR-27442-00-00	Bracket 2
16	4YR-27443-00-00	Bracket 3
17	90109-103A9-00	Bolt
18	90206-17084-00	Washer, Wave
19	4DN-2144G-00-00	Stay, Stop Switch
20	98507-06008-00	Screw
21	4SV-27414-00-00	Damper, Footrest
22	90387-1012G-00	Collar
23	95814-08045-00	Bolt, Flange
24	90201-087G2-00	Washer, Plate
25	90109-087F1-00	Bolt
26	5RT-27430-00-00	Rear Footrest Assy 1
27	5RT-27431-00-00	• . Footrest, Rear 1
28	90501-12743-00	• . Spring, Compression
29	93501-04011-00	• . Ball
30	95024-06045-00	• . Bolt, Flange
31	1HX-27437-00-00	• . Washer, Special
32	95604-06200-00	• . Nut, U Flange
33	90387-064H8-00	• . Collar
34	3YX-27413-00-00	• . Cover, Footrest
35	90157-05079-00	• . Screw, Pan Head
36	5RT-27440-00-00	Rear Footrest Assy 2
37	5RT-27441-00-00	• . Footrest, Rear 2
38	90501-12743-00	• . Spring, Compression
39	93501-04011-00	• . Ball
40	95024-06045-00	• . Bolt, Flange
41	1HX-27437-00-00	• . Washer, Special
42	95604-06200-00	• . Nut, U Flange
43	90387-064H8-00	• . Collar
44	3YX-27413-00-00	• . Cover, Footrest
45	90157-05079-00	• . Screw, Pan Head
46	90109-087F1-00	Bolt
47	2H7-27414-00-00	Damper, Footrest
48	90387-10636-00	Collar
49	95814-10040-00	Bolt, Flange
50	90201-100A1-00	Washer, Plate
51	5DM-27111-10-00	Stand, Main
52	90109-101E6-00	Bolt
53	90506-40508-00	Spring, Tension
54	90506-23509-00	Spring, Tension
55	90445-170K9-00	Hose (I60)

 


56	90185-10091-00	Nut, Self-locking
57	1A0-27114-00-00	Stopper, Main Stand

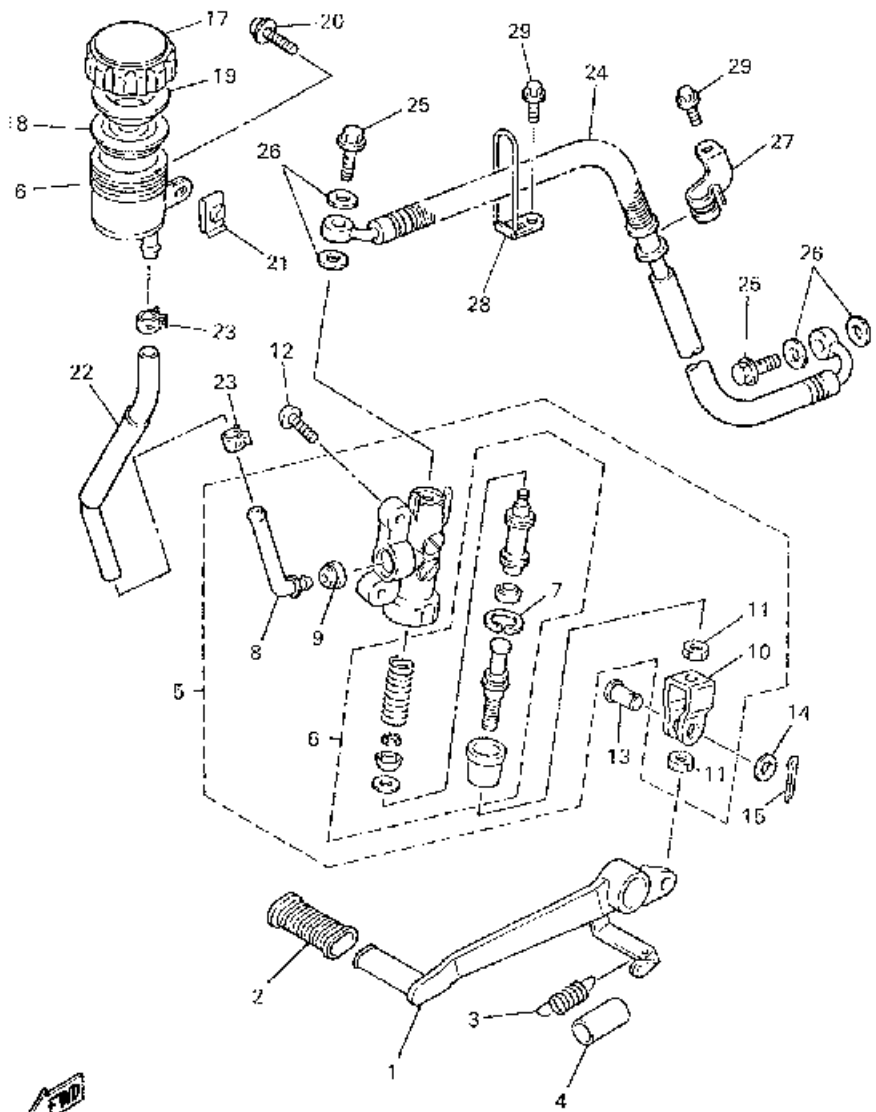 

5DM4351-9360


Ref No	Part No	Description
01	3YX-27211-01-00	Pedal, Brake
02	22N-18113-00-00	Cover, Shift Pedal
03	90506-20377-00	Spring, Tension
04	90446-17346-00	Hose
05	4BP-2583V-01-00	Rr. Master Cylinder Assy.
06	4BP-W0042-50-00	• . Cylinder Kit, Master
07	3LN-2585G-00-00	• . Circlip
08	4BP-2582A-00-00	• . Joint
09	4BP-2585F-00-00	• . Bush
10	4BP-27222-01-00	• . Joint
11	90170-08010-00	• . Nut
12	92014-08020-00	Bolt, Button Head
13	90240-08124-00	Pin, Clevis
14	90201-08083-00	Washer, Plate
15	91401-20012-00	Pin, Cotter
16	31A-25894-01-00	Tank, Reservoir
17	2KF-25852-50-00	Cap, Reservoir
18	360-25854-01-00	Diaphragm, Reservoir
19	2GU-25855-00-00	Bush,diaphragm
20	90159-06085-00	Screw, With Washer
21	90183-06023-00	Nut, Spring
22	5DM-25895-00-00	Hose, Reservoir
23	90467-14057-00	Clip
24	5RT-2581K-00-00	Hose, Brake 5
25	90401-10159-00	Bolt, Union
26	90201-10118-00	Washer, Plate
27	4FM-25876-00-00	Holder, Brake Hose 2
28	4BH-25886-02-00	Holder, Brake Hose
29	95027-06010-00	Bolt, Flange

Ref No	Part No	Description
01	5RT-28381-00-00	Windshield
02	5RT-87278-00-00	Cover, Meter
03	90150-05023-00	Screw, Round Head
04	90179-05523-00	Nut
05	5RT-2835G-00-P0	Body, Front Upper 1
05	5RT-2835G-00-P1	Body, Front Upper 1
05	5RT-2835G-00-P3	Body, Front Upper 1
06	5LV-2836B-01-00	Tuning Fork Mark
07	5RT-28391-00-00	Graphic 1
07	5RT-28391-10-00	Graphic 1
07	5RT-28391-30-00	Graphic 1
08	5RT-28392-00-00	Graphic 2
08	5RT-28392-10-00	Graphic 2
08	5RT-28392-30-00	Graphic 2
09	90110-06200-00	Bolt, Hexagon Socket Head
10	90202-06170-00	Washer, Plate
11	5RT-2836K-00-00	Panel, Inner 1
12	5RT-2836L-00-00	Panel, Inner 2
13	90183-05074-00	Nut, Spring
14	90154-05013-00	Screw, Binding
15	5RT-28356-00-00	Stay 1
16	90110-08071-00	Bolt, Hexagon Socket Head
17	5RT-2836A-00-00	Bracket 1
18	5RT-2836E-00-00	Bracket 2
19	95807-06010-00	Bolt, Flange
20	5LV-26280-00-00	Rear View Mirror Assy (left)
21	5LV-26290-00-00	Rear View Mirror Assy (right)
22	4SV-26298-00-00	Plate, Mirror Fitting 1
23	95707-06500-00	Nut, Flange

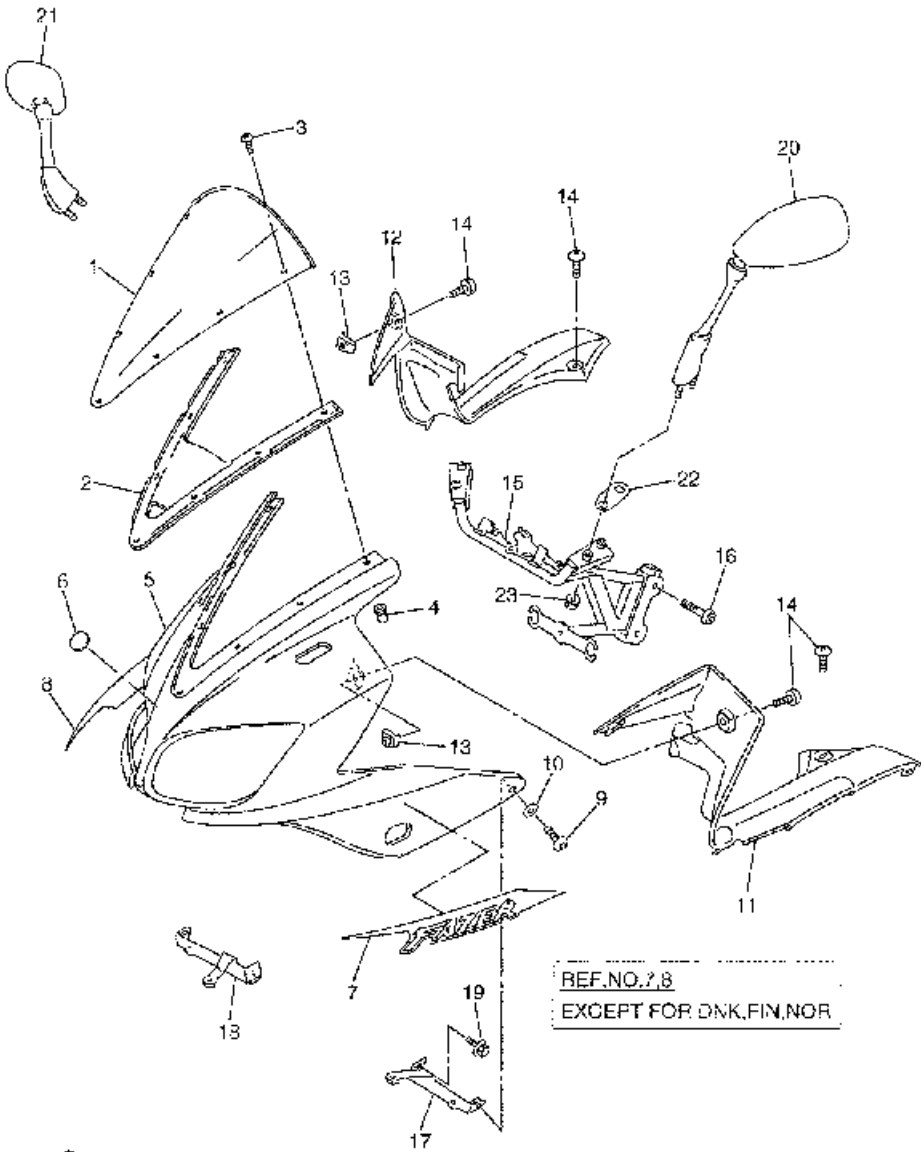 


5RT4300-B370

Ref No	Part No	Description
01	5RT-81450-00-0	Rotor Assy
02	5RT-81410-00-0	Stator Assy
03	92017-06030-00	Bolt
04	98507-05016-00	Screw
05	92907-05600-00	Washer, Plate
06	90201-05027-00	Washer, Plate
07	90280-03047-00	Key, Woodruff
08	90105-12584-00	Bolt, Flange
09	90201-121H0-00	Washer, Plate


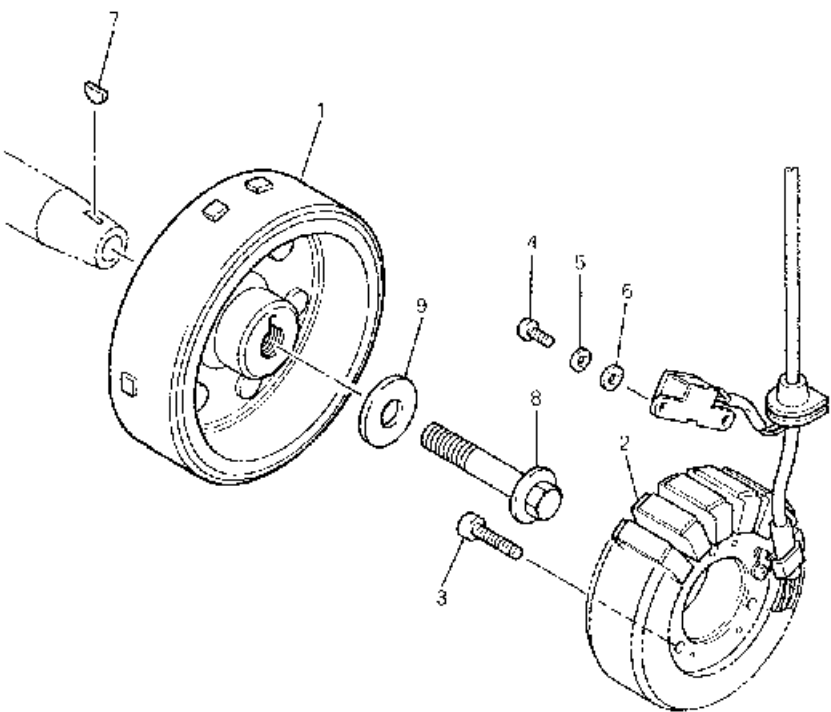 


4YR010-7380

Ref No	Part No	Description
01	4YR-81890-00-00	Motor Assy
02	3HE-81840-00-00	• Brush Holder Assy
03	3AJ-81809-00-00	• Washer Kit
04	3HE-81826-00-00	• Bolt
05	11H-81844-00-00	• Gasket
06	1FK-81847-00-00	• O-ring
07	4YR-81815-00-00	Cord, Starter Motor
08	4XV-8182A-00-00	Nut
09	90105-060A0-00	Bolt, Flange

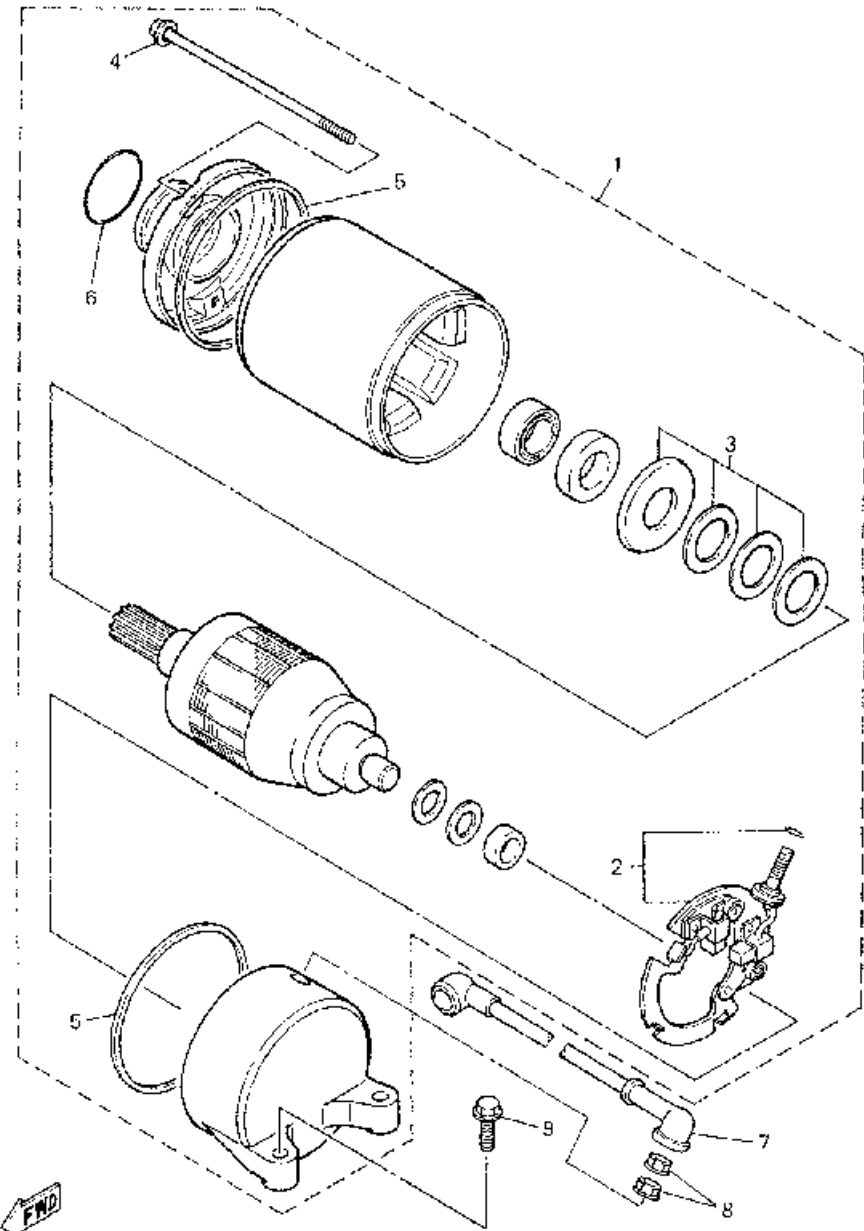 


5DM735~-0390

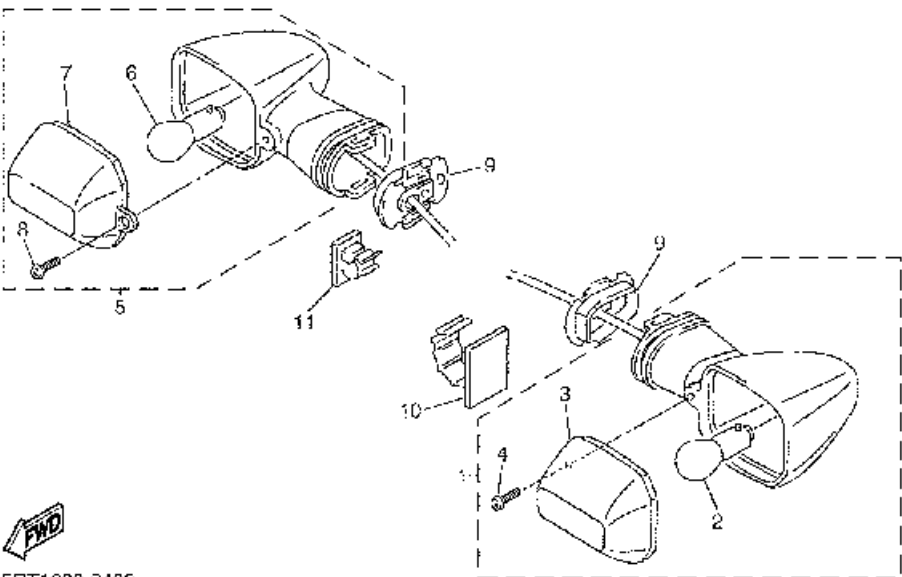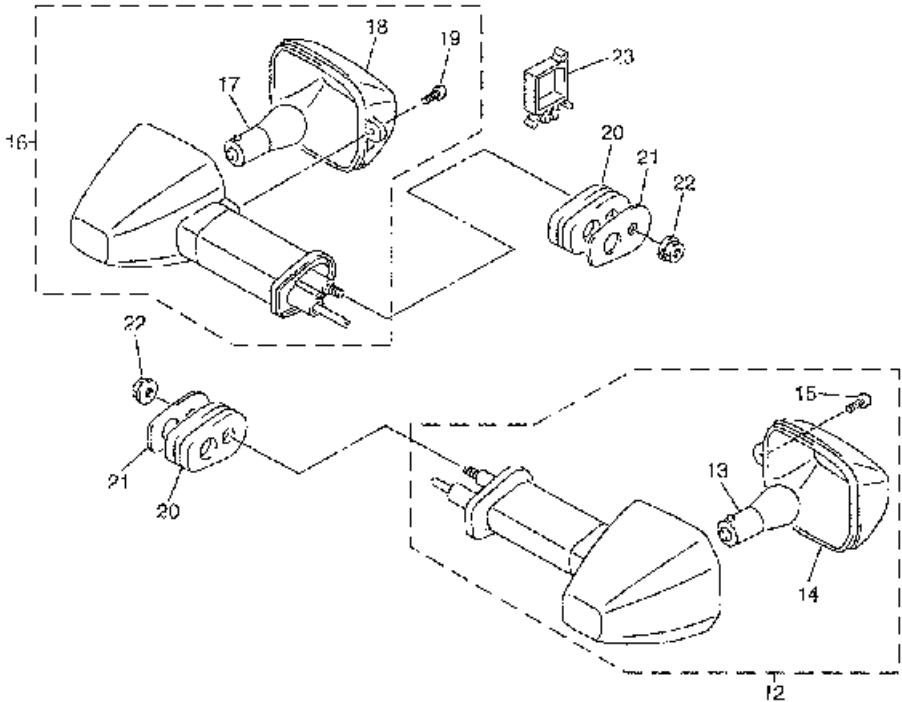  


Ref No	Part No	Description
01	5DM-83310-00-00	Front Flasher Light Assy 1
02	306-83311-40-00	• . Bulb, Flasher (12v-21w)
03	4JH-83332-00-00	• . Lens, Flasher
04	97702-40610-00	• . Screw, Tapping
05	5DM-83320-00-00	Front Flasher Light Assy 2
06	306-83311-40-00	• . Bulb, Flasher (12v-21w)
07	4JH-83342-00-00	• . Lens, Flasher 2
08	97702-40610-00	• . Screw, Tapping
09	5DM-8331L-00-00	Plate, Stopper
10	90464-20003-00	Clamp
11	90464-62085-00	Clamp
12	4JH-83330-00-00	Rear Flasher Light Assy 1
13	306-83311-40-00	• . Bulb, Flasher (12v-21w)
14	4JH-83342-00-00	• . Lens, Flasher 2
15	97702-40610-00	• . Screw, Tapping
16	4JH-83340-00-00	Flasher Light Assy 2
17	306-83311-40-00	• . Bulb, Flasher (12v-21w)
18	4JH-83332-00-00	• . Lens, Flasher
19	97702-40610-00	• . Screw, Tapping
20	4FM-83345-00-00	Plug, Blind
21	4FM-83369-00-00	Stay, Flasher 2
22	95707-06500-00	Nut, Flange
23	90464-16025-00	Clamp

Ref No	Part No	Description
01	5RT-83570-00-00	Speedometer Assy
01	5RT-83570-10-00	Speedometer Assy
02	4YR-85750-01-00	Fuel Meter Assy
03	5RT-8353E-00-00	Case, Meter Upper
04	5DM-2341B-00-00	•. Emblem
05	4YR-83572-00-00	Case, Speedometer Lower
06	97707-40018-00	Screw, Tapping
07	4YR-8362Y-00-00	Screw, Special
08	4YR-83534-00-00	Socket, Neutral
09	4YR-83517-00-00	Bulb (12v-1.4w T5)
10	4YR-83517-10-00	Bulb (12v-2w T5)
11	90480-14585-00	Grommet
12	90201-06380-00	Washer, Plate
13	95307-06600-00	Nut
14	4YR-83755-02-00	Sensor, Speed
15	4YR-2517G-00-00	•. Rotor, Sensor
16	90465-14310-00	Clamp

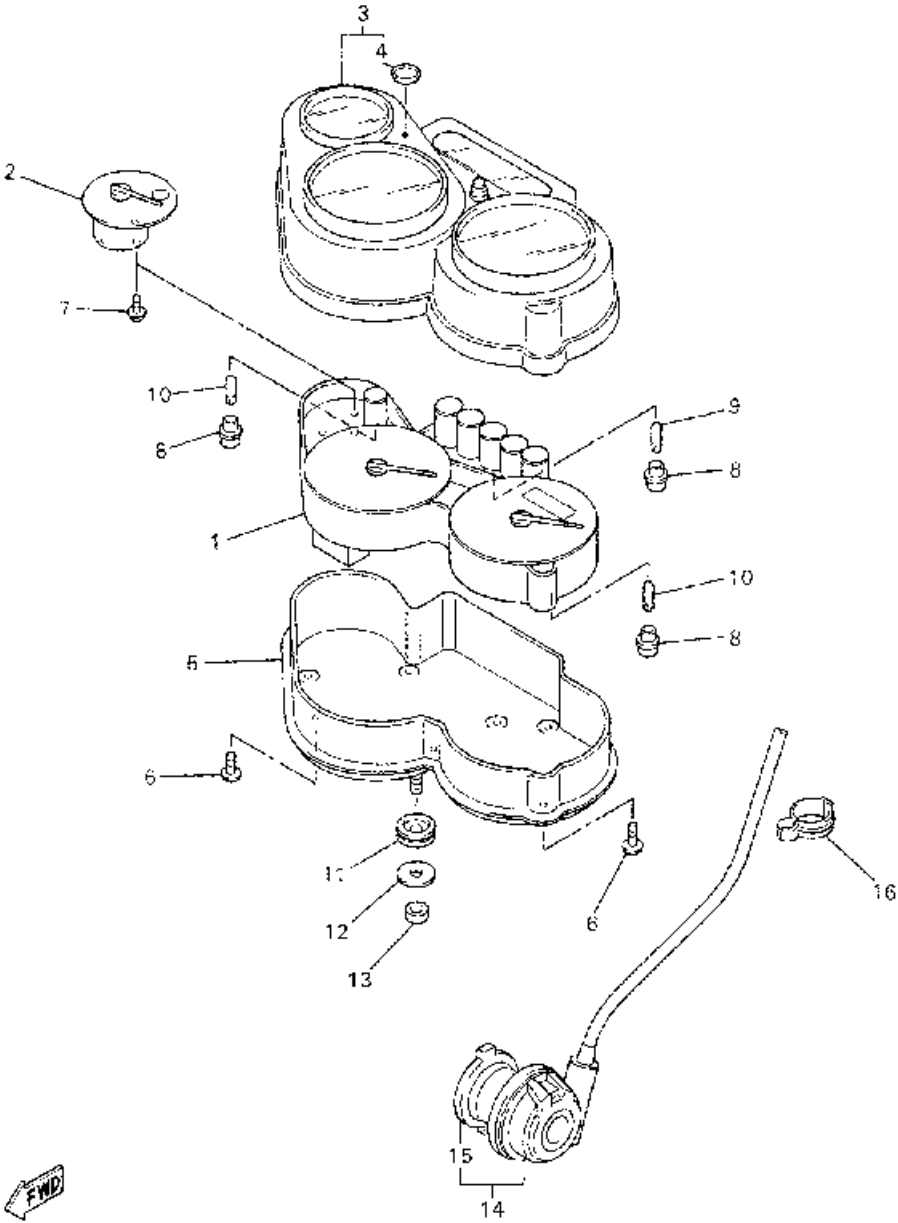 


FWD
5DMC351-1410

Ref No	Part No	Description
01	5LV-84310-00-00	Headlight Unit Assy
01	5LV-84310-10-00	Headlight Unit Assy
02	8G9-84314-00-00	Bulb (12v-60/55w)
03	5LV-84397-00-00	Cover, Socket
04	4SV-84347-00-00	Bulb (12v-5w)
05	5RT-84312-00-00	Holder, Socket
06	90480-14229-00	Grommet
07	90164-05014-00	Screw, Tapping
08	97707-50016-00	Screw, Tapping
09	5RT-84359-00-00	Cord, Headlight
10	90464-12089-00	Clamp

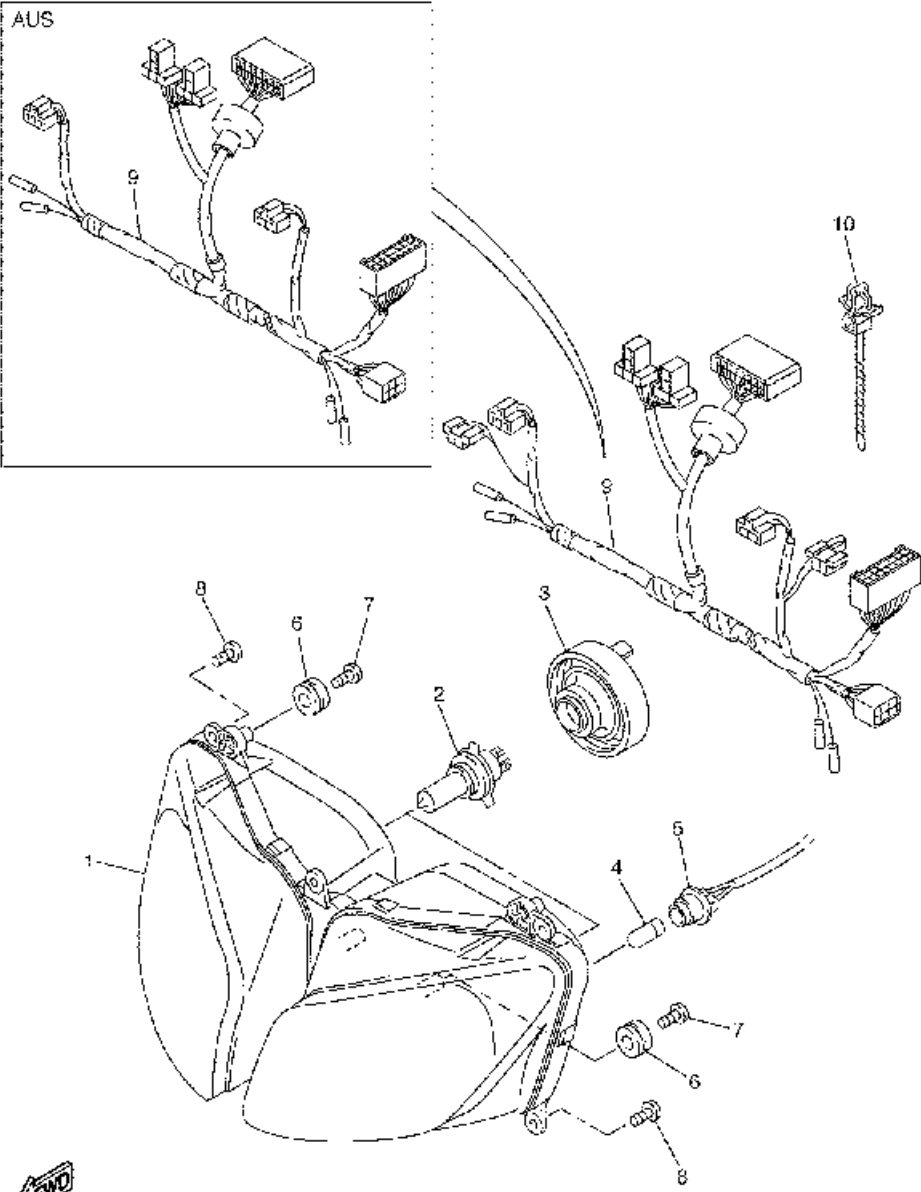 


FWD
5RT4300-B420

Ref No	Part No	Description
01	5RT-84710-00-00	Taillight Unit Assy
02	137-84714-60-00	• Bulb, Taillight(12v-21/5w)
03	4SV-84735-00-00	• Cord Assy
04	4YR-21649-00-00	Damper
05	90119-06118-00	Bolt, With Washer
06	90480-18276-00	Grommet
07	90387-077M3-00	Collar

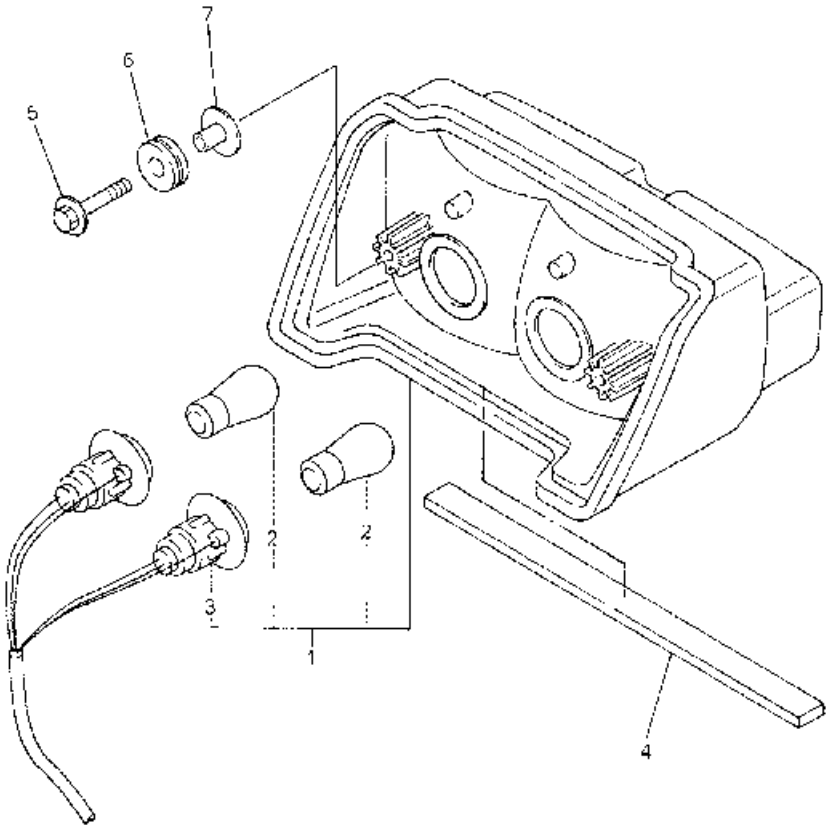 


4YR010-7430

Ref No	Part No	Description
01	5RT-83969-00-00	Switch, Handle 5
02	98507-05025-00	•. Screw
03	90465-10098-00	Clamp
04	90464-23041-00	Clamp
05	5RT-83963-00-00	Switch, Handle 3 (right)
06	98507-05045-00	•. Screw
07	3YX-82911-01-00	Holder, Lever 1
08	3YX-83912-00-00	Lever 1
09	3YX-82917-01-00	Switch
10	90123-08096-00	Bolt
11	90179-08148-00	Nut
12	3YX-83945-00-00	Bolt, Lever
13	95607-06100-00	Nut, U
14	98707-03020-00	Screw, Flat Head
15	90338-09012-00	Plug
16	95027-06020-00	Bolt, Flange

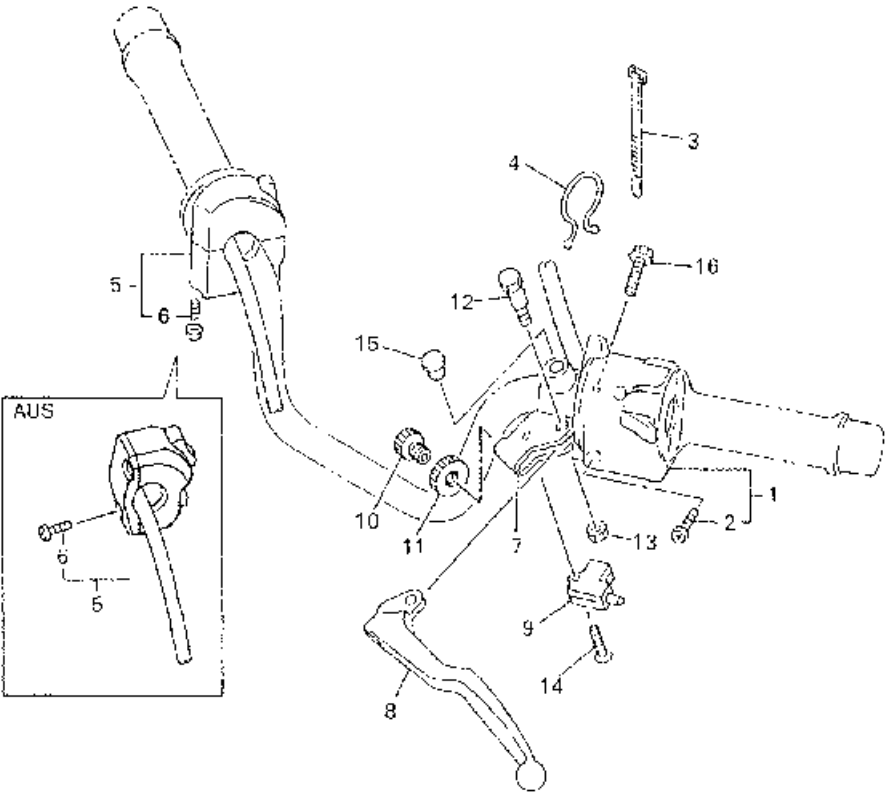 


5RT43GG-3440

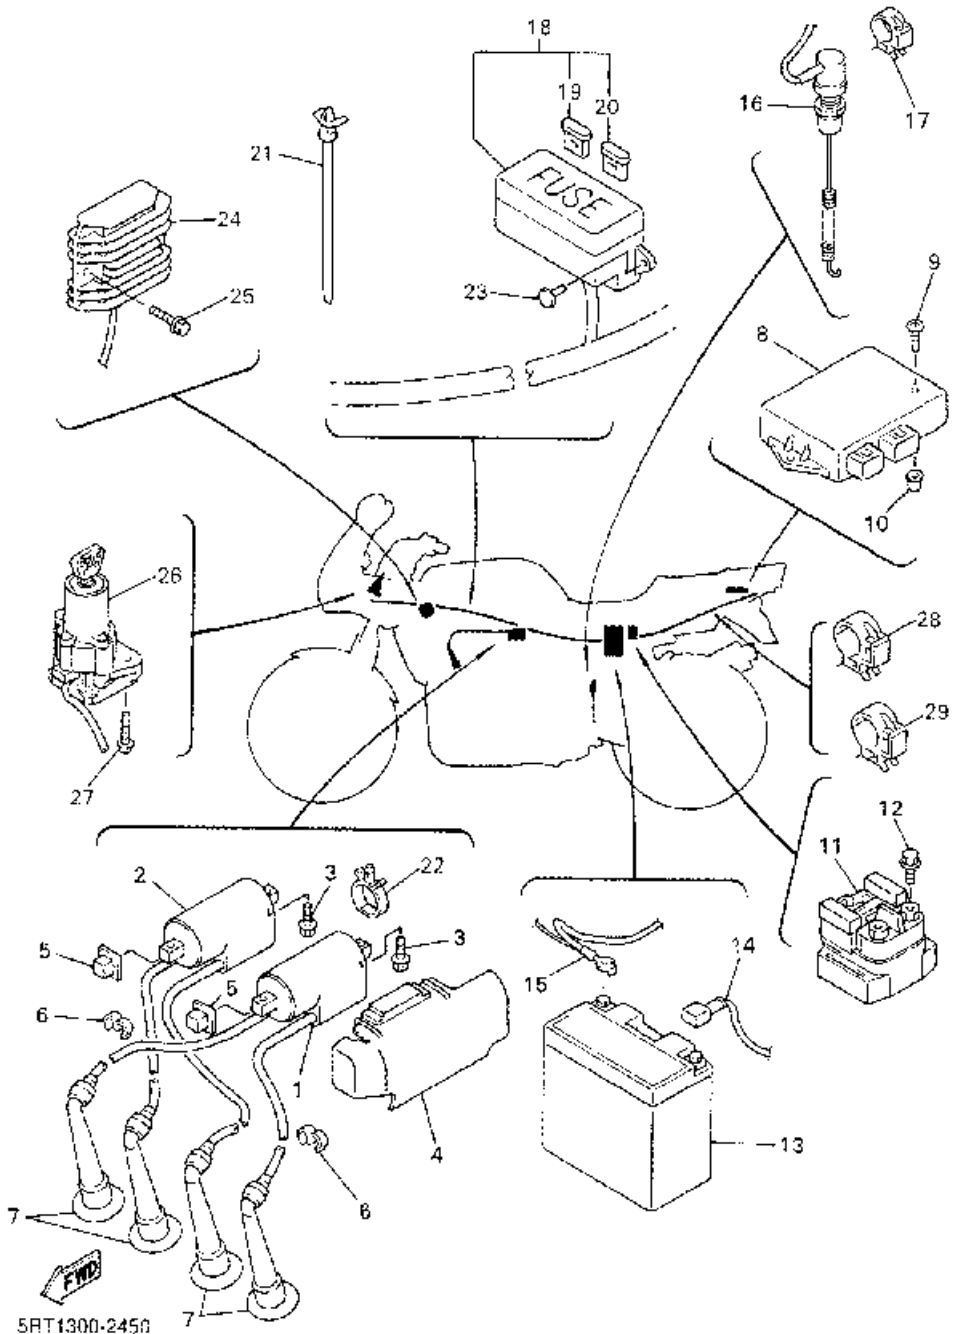 

Ref No	Part No	Description
01	5DM-82310-00-00	Ignition Coil Assy
02	5DM-82320-00-00	Ignition Coil Assy
03	95807-06020-00	Bolt, Flange
04	5DM-82314-00-00	Cover, Ignition Coil
05	4U8-82317-00-00	Damper, Ignition Coil
06	90464-60067-00	Clamp
07	5DM-82370-00-00	Plug Cap Assy
08	5DM-82305-01-00	Ignitor Unit Assy
09	97707-60016-00	Screw, Tapping
10	90338-08226-00	Plug
11	4YR-81940-00-00	Starter Relay Assy
12	95027-06008-00	Bolt, Flange
13	4TX-82100-02-00	Battery Assy (gs Gt12b-4)
14	4YR-82115-01-00	Wire, Plus Lead
15	4YR-82116-00-00	Wire, Minus Lead
16	5RT-82530-00-00	Stop Switch Assy
17	90464-08189-00	Clamp
18	5RT-82590-00-00	Wire Harness Assy
19	2GV-82151-00-00	• . Fuse (20a-bl)
20	42X-82151-00-00	• . Fuse (10a-bl)
21	90464-12036-00	Clamp
22	90464-24230-00	Clamp
23	90269-06063-00	Rivet
24	5RT-81960-00-00	Rectifier & Regulator Assy
25	95807-06020-00	Bolt, Flange
26	5RT-82501-00-00	Main Switch Steering Lock
27	90109-080G5-00	Bolt
28	90464-15192-00	Clamp
29	90464-20191-00	Clamp

Ref No	Part No	Description
01	1AE-82540-00-00	Neutral Switch Assy
02	93210-29196-00	O-ring
03	98507-06016-00	Screw, Pan Head
04	5JJ-83591-00-00	Thermo Unit
05	4JH-85720-02-00	Oil Level Gauge Assy
06	95027-06016-00	Bolt, Flange
07	3LN-82560-01-00	Thermo Switch Assy
08	5RT-82541-00-00	Wire, Lead
09	5KP-81950-00-00	Relay Assy
10	5RT-82566-90-00	Switch, Side Stand
11	90157-05079-00	Screw, Pan Head
12	90464-08189-00	Clamp
13	90464-16061-00	Clamp
14	90464-20213-00	Clamp
15	90465-10098-00	Clamp
16	90465-10098-00	Clamp
17	5JJ-81950-10-00	Relay Assy
18	5JJ-81950-20-00	Relay Assy
19	4VR-83350-00-00	Flasher Relay Assy
20	4VR-8338V-00-00	Damper
21	3BN-83371-00-00	Horn
22	95807-06010-00	Bolt, Flange
23	5RT-85752-00-00	Sender Unit Assy, Fuel Meter
24	5G3-85753-00-00	Gasket, Sender Unit
25	90119-05071-00	Bolt, With Washer
26	90464-25160-00	Clamp

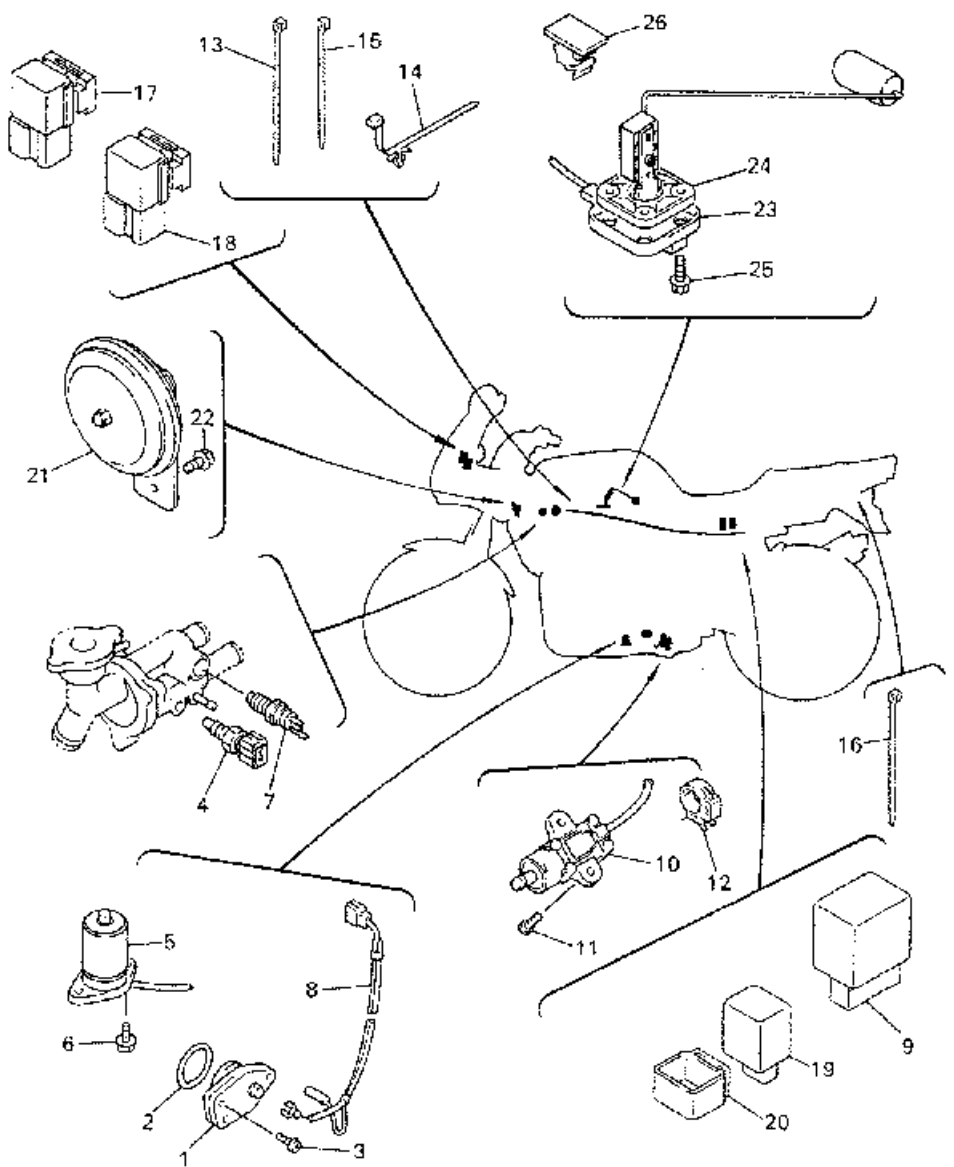 


5RT1300-2460